



R	1	2	3	4	5,7	8	9,11	10	12,13	14,15	16,17	18	19
C				1,2	3,5	4	6	7,8	9	10	11	13,14	
Schalter													SI

Spurwählertaste/Track Selector

