


SERVICE MANUAL



STEREO RADIO CASSETTE RECORDER

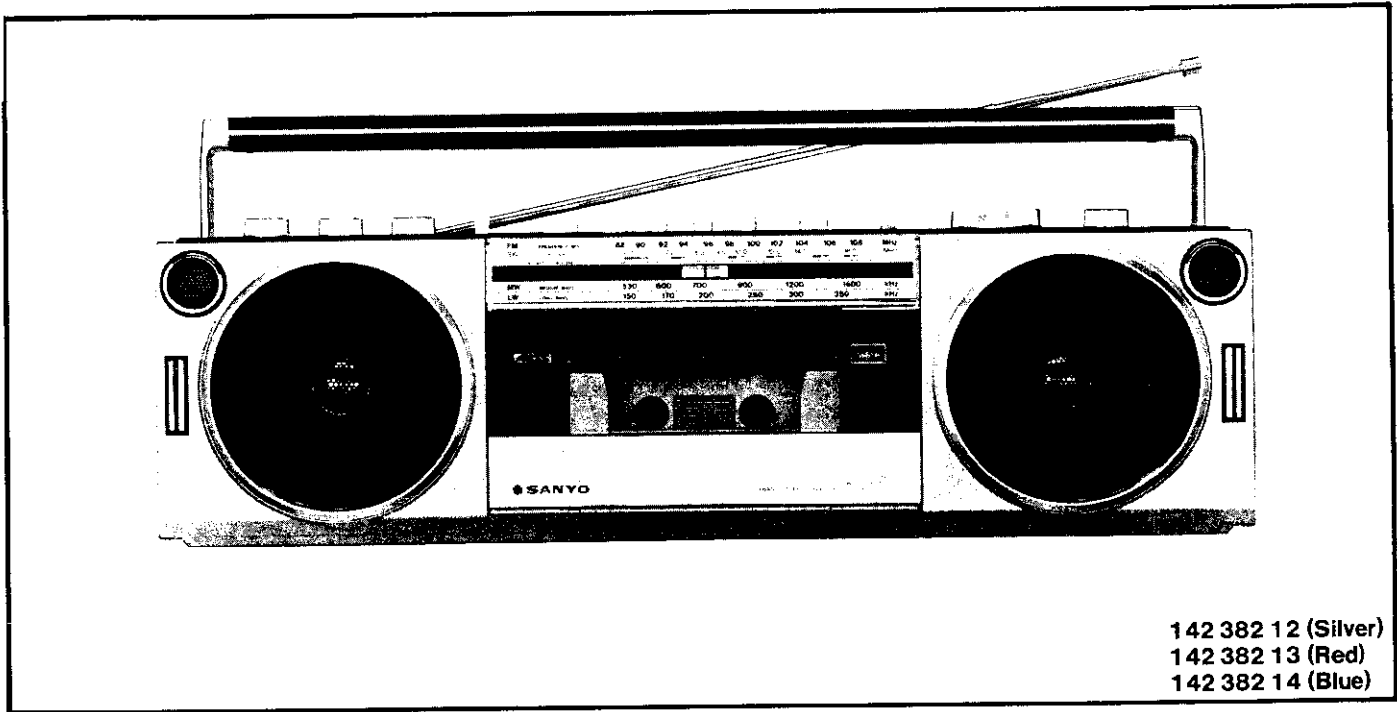

142 382 12 (Silver)
142 382 13 (Red)
142 382 14 (Blue)

SPECIFICATIONS

Power Source		Fast Forward Time	110sec. (with C-60)
AC	115V/230V (50/60Hz)	Rewind Time	110sec. (with C-60)
DC	7.5V	Frequency Response (Overall)	
(UM-2, HP11, C Cell, Babyzelle, R 14) x 5		Fe ₂ O ₃	125Hz ~ 8,000Hz
Output Power (Max. music power)	2.2W x 2 (Max.)	Erase Ratio (Overall, with Fe ₂ O ₃)	45dB
Power Consumption	8W	Signal to Noise Ratio (with Fe ₂ O ₃)	28dB
Current Consumption (at Vol. Min.)		Crosstalk (with Fe ₂ O ₃)	
Record mode (with Metal)	180mA	Track to Track	50dB
Playback mode	130mA	Terminal Impedance	
Fast Forward mode	130mA	MIC.	0.3mV/3.3kΩ
Rewind mode	120mA	Headphones	32Ω
Recording System	DC Bias	Dimensions	436(W) x 123(H) x 86(D)mm
Erasing System	DC Erasing	Weight (without battery)	2.2kg
Tape Speed	1-7/Bips. ±3%	Frequency Range	
Wow & Flutter	0.15%, WRMS	MW	525 ~ 1,605kHz
Torque		LW	150 ~ 350kHz
Playback	34 ~ 55g-cm	SW	6 ~ 18MHz
Fast Forward	more than 55g-cm	FM	87.5 ~ 108MHz
Rewind	more than 55g-cm		

—Specifications subject to change without notice.—

NOTE:

The above mentioned specifications are mainly based on the IHF measurements standard. They can therefore not directly be compared with specifications based on the DIN standard or other standards.

WM-10719


DISASSEMBLY INSTRUCTIONS

GENERAL REMARKS

- Before disassembling the unit, spread a soft rubber mat or a cloth on the work bench to avoid scratches and grease stains.
- Do not spread anything which is likely to cause static electricity because transistors and ICs may be easily damaged by it.
- Reassemble the unit, noting the kinds of screws and the soldering and arrangement of the leads. Refer to "Circuit Diagram and Exploded Views" for correct assembly.
- Before disassembling the unit, take out the cassette tape and the batteries.

CABINET BOTTOM REMOVAL

1. Detach the Battery Compartment Lid from the unit. Remove the eight screws (1 ~ 8) fastening the Cabinet Bottom and detach the Cabinet Bottom by carefully lifting it from the unit.

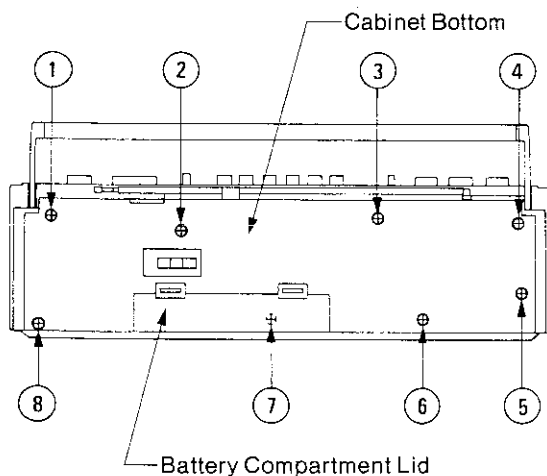

2. Disconnect the FM antenna connector from the Radio Tuner P.C.Board.
3. Reassemble in reverse order.


RADIO TUNER P.C. BOARD REMOVAL

1. Detach the Cabinet Bottom by following the instructions for the Cabinet Bottom Removal.
2. Turn the Tuning Knob fully counter-clockwise and remove the two screws (9 and 10) fastening the Radio Tuner P.C.Board and then, detach the Radio Tuner P.C.Board by lifting it.

NOTE:


A. Do not turn the Tuning Knob before the Radio Tuner P.C.Board is re-mounted to the Cassette Mechanism.

- B. After mounting the P.C.Board, check to see that the correct dial indications are obtained.
- C. Reassemble in reverse order.

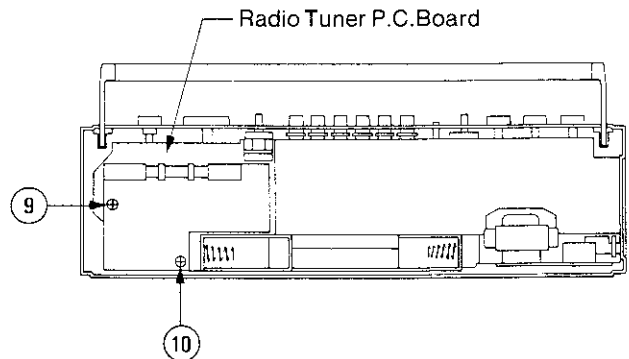

RADIO CHASSIS REMOVAL

1. Detach the Cabinet Bottom by following the instructions for the Cabinet Bottom Removal.
2. Pull out the Fine Tuning Knob, Tuning Knob, Balance Control Knob, Tone Control Knob, and Volume Control Knob from the unit.

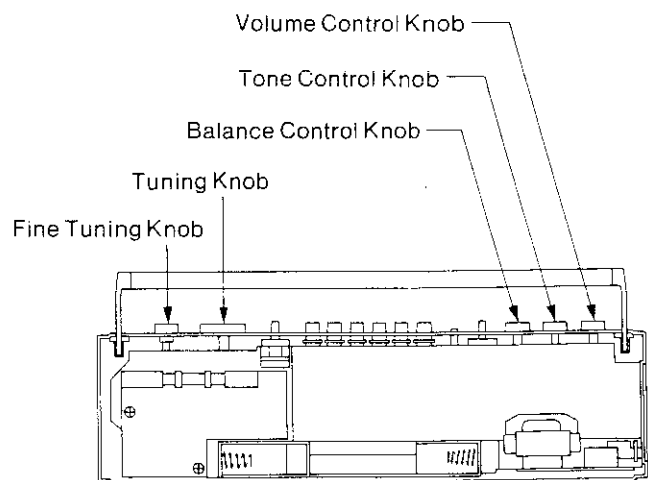


3. Disconnect the three connectors for the speakers from the Amplifier P.C.Board.
4. To detach the Radio Chassis, carefully lift the lower side of it.
5. Reassemble in reverse order.

AMPLIFIER P.C. BOARD REMOVAL

1. Detach the Radio Chassis by follow the instructions for the Radio Chassis Removal.
2. Remove the screw (11) fastening the Amplifier P.C.Board and disconnect the two connectors for the power supply.

DISASSEMBLY INSTRUCTIONS (Continued)

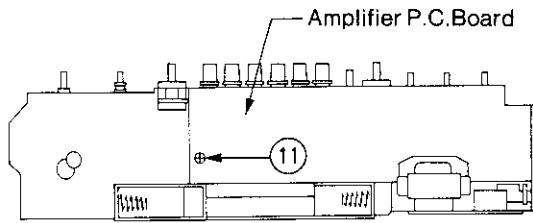


3. After the jacks on the P.C. Board are removed from the Radio Chassis by shifting the P.C. Board to the Radio Tuner P.C. Board side, remove the P.C. Board by lifting its lower side, noting lead wires.

4. Reassemble in reverse order.

CASSETTE MECHANISM REMOVAL

1. Detach the Radio Chassis by following the instructions for the Radio Chassis Removal.
2. After removing the screw (11) fastening the Amplifier P.C. Board, turn over the unit.
3. Detach the Tape Counter and Tape Counter Belt by removing the fastening screw (12).

4. Remove the three screws (13 ~ 15) fastening the Cassette Mechanism and detach the Cassette Mechanism, noting the lead wires.

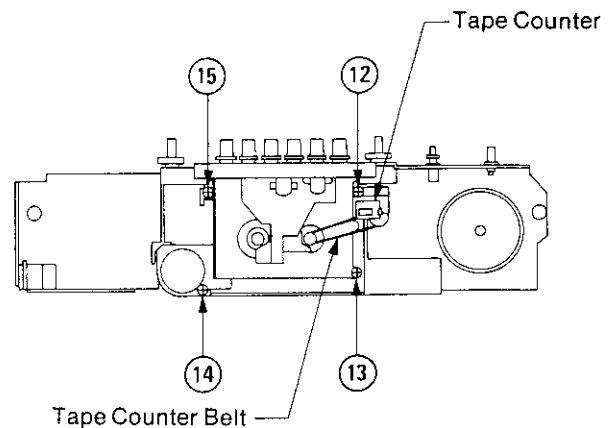

5. Reassemble in reverse order.

CASSETTE COMPARTMENT LID REMOVAL

1. Open the cassette compartment lid by pressing the Stop/Eject button.
2. To remove the cassette compartment lid, disengage the catches on both sides of the cassette compartment lid by pressing both sides firmly but carefully.
3. Reassemble in reverse order.

ADJUSTMENT PROCEDURES

GENERAL REMARKS

- Before the adjustments, wipe off stains on the tape contacting surfaces of the parts, the belt and pinch roller with a soft cloth soaked in alcohol. Trouble may occur because of oil and grease stains.
- Carefully handle the belt because grease easily attaches to it.
- Check the rubber parts, if the rubber has quality deterioration or scratch marks, replace the part with a new one.

EQUIPMENT REQUIRED

- VTVM (2 sets)
- Frequency Counter
- Dummy Load (32Ω)
- Dualtrace Synchroscope
- DC Constant-voltage Regulator
- Test Tapes
 - ‡ 3kHz Test Tape (Example: TEAC MTT-111) for Tape Speed Adjustment
 - ‡ 8kHz Test Tape (Example: TEAC MTT-113C) for Head Azimuth Adjustment
- Alignment Tool

Unless especially specified, set the switches and controls as follows:

- Function Switch TAPE
- Mode Switch STEREO
- Beat Cancel Switch 1
- Balance Control Center (click position)
- Tone Control High
- Volume Control Arbitrary

NOTE:

- ‡ Obtain the output from the Phones jack when the adjustment is performed.
- ‡ Supply 7.5V DC from the constant-voltage regulator to the Ext. Power Jack.

AMSS SOLENOID ADJUSTMENT

AMSS (Automatic Music Select System) detects a silent space (unrecorded portion) between each selection on a music tape and automatically plays back a desired selection from the start.

NOTE:


The unrecorded portion should last for more than 4 seconds.

It may not operate correctly in the following cases:

- ‡ When the recorded sound is often interrupted as in a speech tape.
- ‡ When the silent space does not last long enough (less than 4 seconds).
- ‡ When there is an appreciable noise in the silent space between two adjacent programs.
- ‡ When the unit is placed on a television set, AMSS may not operate correctly due to an adverse effect from the TV signal. In this case, move the unit away from the television set.

In cases where the AMSS Solenoid is not correctly positioned, the AMSS Switch does not function correctly, the F.FWD or Rewind button releases while AMSS is working, or a button cannot be locked, perform the adjustment as follows:

1. Remove the Cassette Mechanism from the unit by following its removal instructions.
2. Loosen the two screws fastening the Spacer of the Solenoid and adjust the Spacer by moving it in the direction of the arrow, so that the Lock Plate is tightly attached to the two absorption surfaces of the Solenoid as illustrated.

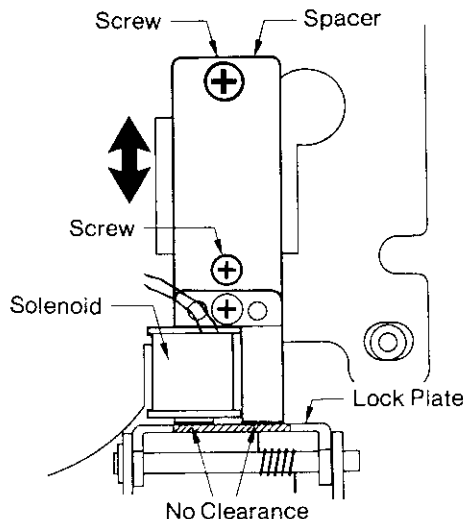


3. After the adjustment, tighten the screws. Set the unit in the playback mode and check that AMSS mechanism functions correctly as follows:
 - ‡ Check if F.FWD button can be locked by pressing it.
 - ‡ Check if Rewind button can be locked by pressing it.
4. Readjust the spacer position if either F.FWD or Rewind button cannot be locked or is released too soon.
5. After the adjustment, secure the screw with paint or glue.

TAPE SPEED ADJUSTMENT


1. Remove the cassette compartment lid and connect a frequency counter to the left or right channel output of the Phones Jack as illustrated. Then, insert a 3kHz test tape (Example: TEAC MTT-111) into the cassette compartment.

Frequency Counter
3,000Hz (±10Hz)

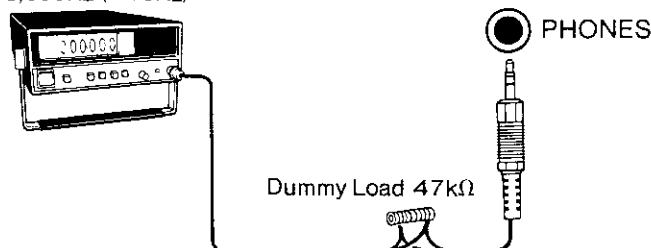

ADJUSTMENT PROCEDURES (Continued)

- Adjust the tape speed by slowly turning the potentiometer inside the Motor with an alignment tool until the frequency counter reads 3,000Hz (± 10 Hz).

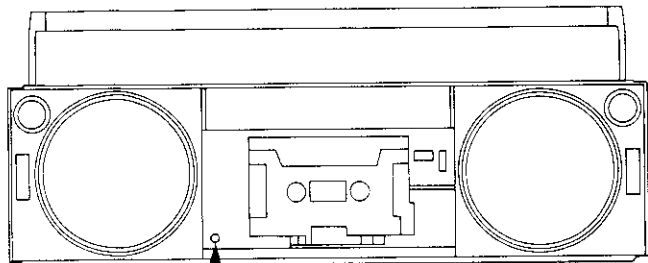

Potentiometer for Tape Speed Adjustment

HEAD AZIMUTH ADJUSTMENT


Detach the cassette compartment lid from the unit and connect a dualtrace synchroscope and a VTVM to both channel of the Phones Jack as illustrated.

Then, set the dualtrace synchroscope as follows:

- ‡ MODE CHOP (chopped)
- ‡ SOURCE INT (internal), CH1 or CH2
- ‡ SWEEP MODE AUTO (automatic)



NOTE:

Adjust the field on the synchroscope with the VOLT. ADJ. and TIME ADJ.

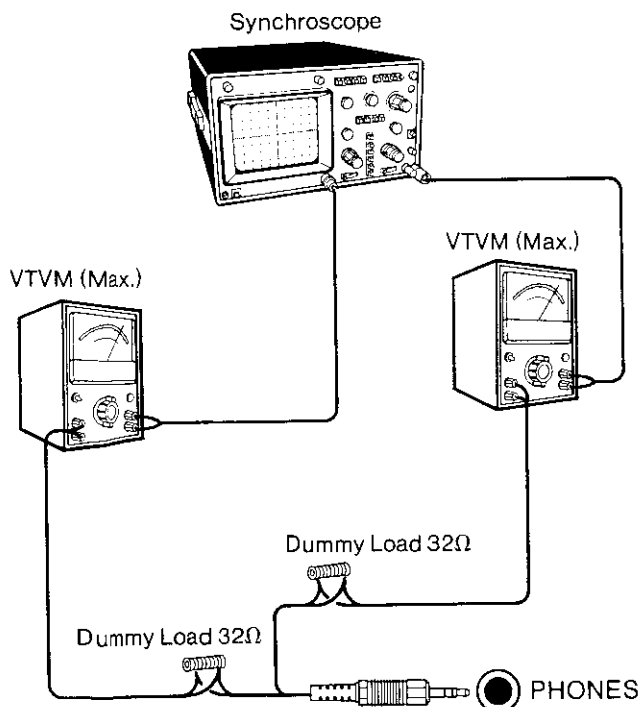

- Insert a 8kHz test tape (Example: TEAC MTT-113C) into the cassette compartment.


- While playing back the test tape, turn the azimuth adjusting screw until the wave forms of the right and left channels are superimposed and set to optimum at maximum reading on the VTVM.

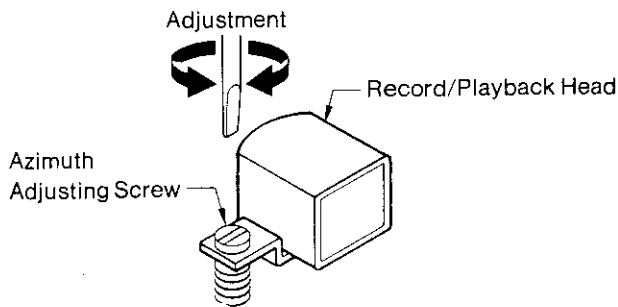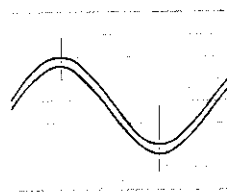

- After the adjustment, secure the adjusting screw with paint or glue.

OSCILLATION FREQUENCY ADJUSTMENT

- Unsolder the earth side of the Erase Head lead from the Amplifier P.C.Board and connect the lead through the resistor 1Ω to the earth as illustrated. Then, set the Beat Cancel Switch to 1.
- Connect a VTVM across the resistor 1Ω and a frequency counter to the output terminal of the VTVM as illustrated and insert a cassette tape into the cassette compartment.

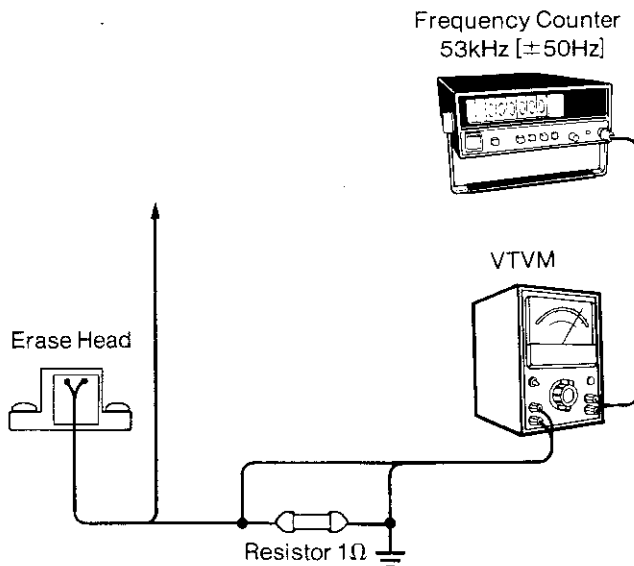

- Set the unit in the recording mode and turn the core of the OSC Transformer (T303) with an alignment tool until the frequency counter reads 53kHz (± 50 Hz).

TUNER ADJUSTMENT

EQUIPMENT REQUIRED



- AM Standard Signal Generator
 - FM Standard Signal Generator
 - Generator Scope
 - Loop Antenna
 - Dummy Antenna (30Ω/10pF) for SW
 - Ceramic Capacitor (10pF)
 - Electrolytic Capacitor (1μF)
 - Dummy Antenna (75Ω, unbalanced type) for FM
 - Carbon Resistor (330kΩ)
 - VTVM
 - Oscilloscope
 - Frequency Counter
 - Dummy Load (3.2Ω)
 - Alignment Tool
- Before performing the adjustment, set the switches and controls as follows:
- ‡ Function Switch RADIO
 - ‡ Mode Switch MONO
 - ‡ Balance Control Center (click position)
 - ‡ Tone Control High
 - ‡ Volume Control Arbitrary

NOTE:


Use an alignment tool with plastic grip for all adjustments.

MW ALIGNMENT

Standard Test Frequency 400Hz and Modulation 30% at AM

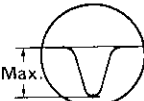
Step	Alignment	Connections		Frequency of Signal Generator	Tuning Dial Setting	Adjustments	Remarks
		INPUT	OUTPUT				
1	Calibration of IF for AM	Connect loop antenna to output terminal of gene-scope. Place loop antenna by bar antenna.	Connect input terminal of gene-scope to Pin 9 of IC2 through capacitor 1μF.	460kHz	Low End	T3 T4 and T5	Obtain symmetrical curve and maximum amplitude. 
2	Calibration of Tuning Range	Connect loop antenna to output of AM signal generator. Place loop antenna 60cm away from bar antenna.	Connect VTVM with 3.2Ω dummy load and oscilloscope to Phones jack.	510kHz	High End	T8	Obtain sine-wave of 400Hz and maximum amplitude. 
3				1,670kHz		TC4	
4	Adjustment of Tracking			600kHz	600kHz	L4-1 (bar ant. coil)	
5				1,400kHz	1,400kHz	TC3 (PVC)	
6	Repeat the above steps until no further change is noted in any of the adjustments.						

LW ALIGNMENT

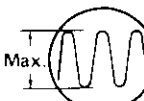Step	Alignment	Connections		Frequency of Signal Generator	Tuning Dial Setting	Adjustments	Remarks
		INPUT	OUTPUT				
1	Calibration of Tuning Range	Connect loop antenna to output of AM signal generator. Place loop antenna 60cm away from bar antenna.	Connect VTVM with 3.2Ω dummy load and oscilloscope to Phones jack.	145kHz	Low End	T9	Obtain sine-wave of 400Hz and maximum amplitude. 
2				365kHz	High End	TC5	
3	Adjustment of Tracking			170kHz	170kHz	L4-2 (bar ant. coil)	
4				310kHz	310kHz	TC2	
5	Repeat the above steps until no further change is noted in any of the adjustments.						




TUNER ADJUSTMENT (Continued)

SW ALIGNMENT

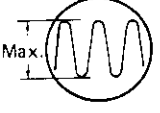Step	Alignment	Connections		Frequency of Signal Generator	Tuning Dial Setting	Adjustments	Remarks
		INPUT	OUTPUT				
1	Calibration of Tuning Range	Connect AM signal generator to antenna terminals (TP1 and TP2) through dummy antenna (30Ω/10pF).	Connect VTVM with 3.2Ω dummy load and oscilloscope to Phones jack.	5.7MHz	Low End	T7	Obtain sine-wave of 400Hz and maximum amplitude. 
2				18.7MHz	High End	TC3	
3	Adjustment of Tracking			6.5MHz	6.5MHz	T6	
4				17.0MHz	17.0MHz	TC1	
5	Repeat the above steps until no further change is noted in any of the adjustments.						


FM ALIGNMENT

Standard test frequency 400Hz and deviation 22.5kHz

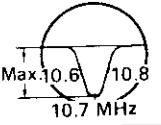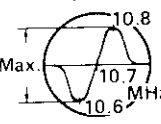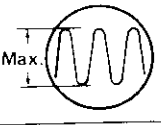Step	Alignment	Connections		Frequency of Signal Generator	Tuning Dial Setting	Adjustments	Remarks
		INPUT	OUTPUT				
1	Calibration of IF	Place output of gene-scope to Pin 3 of IC1 through capacitor 10pF.	Connect input terminal of gene-scope to Pin 9 of IC2 through capacitor 1 μF.	10.7MHz	Low End	Turn T2 (blue core) fully counter-clockwise and adjust T1.	Obtain symmetrical curve and maximum amplitude. 
2						T2 (blue core)	Obtain S curve and maximum amplitude. 
3	Calibration of Tuning Range	Connect FM signal generator to antenna terminals (TP1 and TP2) through dummy antenna (75Ω, unbalanced type).	Connect VTVM with 3.2Ω dummy load and oscilloscope to Phones jack.	87.35MHz	High End	L2	Obtain sine-curve and maximum amplitude. 
4				108.25MHz		TC2 (PVC)	
5	Adjustment of Tracking			90MHz		L1	
6				106MHz		TC1 (PVC)	
7	Repeat the above steps until no further change is noted in any of the adjustments.						

DIAL CORD STRINGING


1. Attach the Drum on the Radio Chassis as illustrated and fully turn the shaft of the variable capacitor counter-clockwise.
2. Mount the Radio Tuner P.C.Board on the Radio Chassis and then, insert the shaft of the variable capacitor into the Drum.
3. Tie the Dial Cord of length 1,100mm and diameter $\phi 0.5$ to the Spring and hook the Spring to the illustrated position of the Drum.
4. Engage the Dial Cord as illustrated in the following order.
Spring \rightarrow Drum \rightarrow Roller A \rightarrow Roller B \rightarrow Tuning Shaft (3 turns) \rightarrow Roller C \rightarrow Roller D \rightarrow Roller E \rightarrow Drum \rightarrow Spring
5. Hook the Dial Cord to the Spring and tie the Cord where the spring tip expands to the mark on the Drum as illustrated (Spring length becomes approximately 30 ~ 31.5mm).
6. Secure the place where the Spring is hooked to the Drum and knot in the Dial cord with paint or glue.
7. Turn the Tuning Shaft counter-clockwise until it stops and then, put the left side of the Pointer together with the scratch mark on the Radio Chassis.
8. Attach the Pointer to the Dial Cord and secure the Pointer with lacquer or glue.

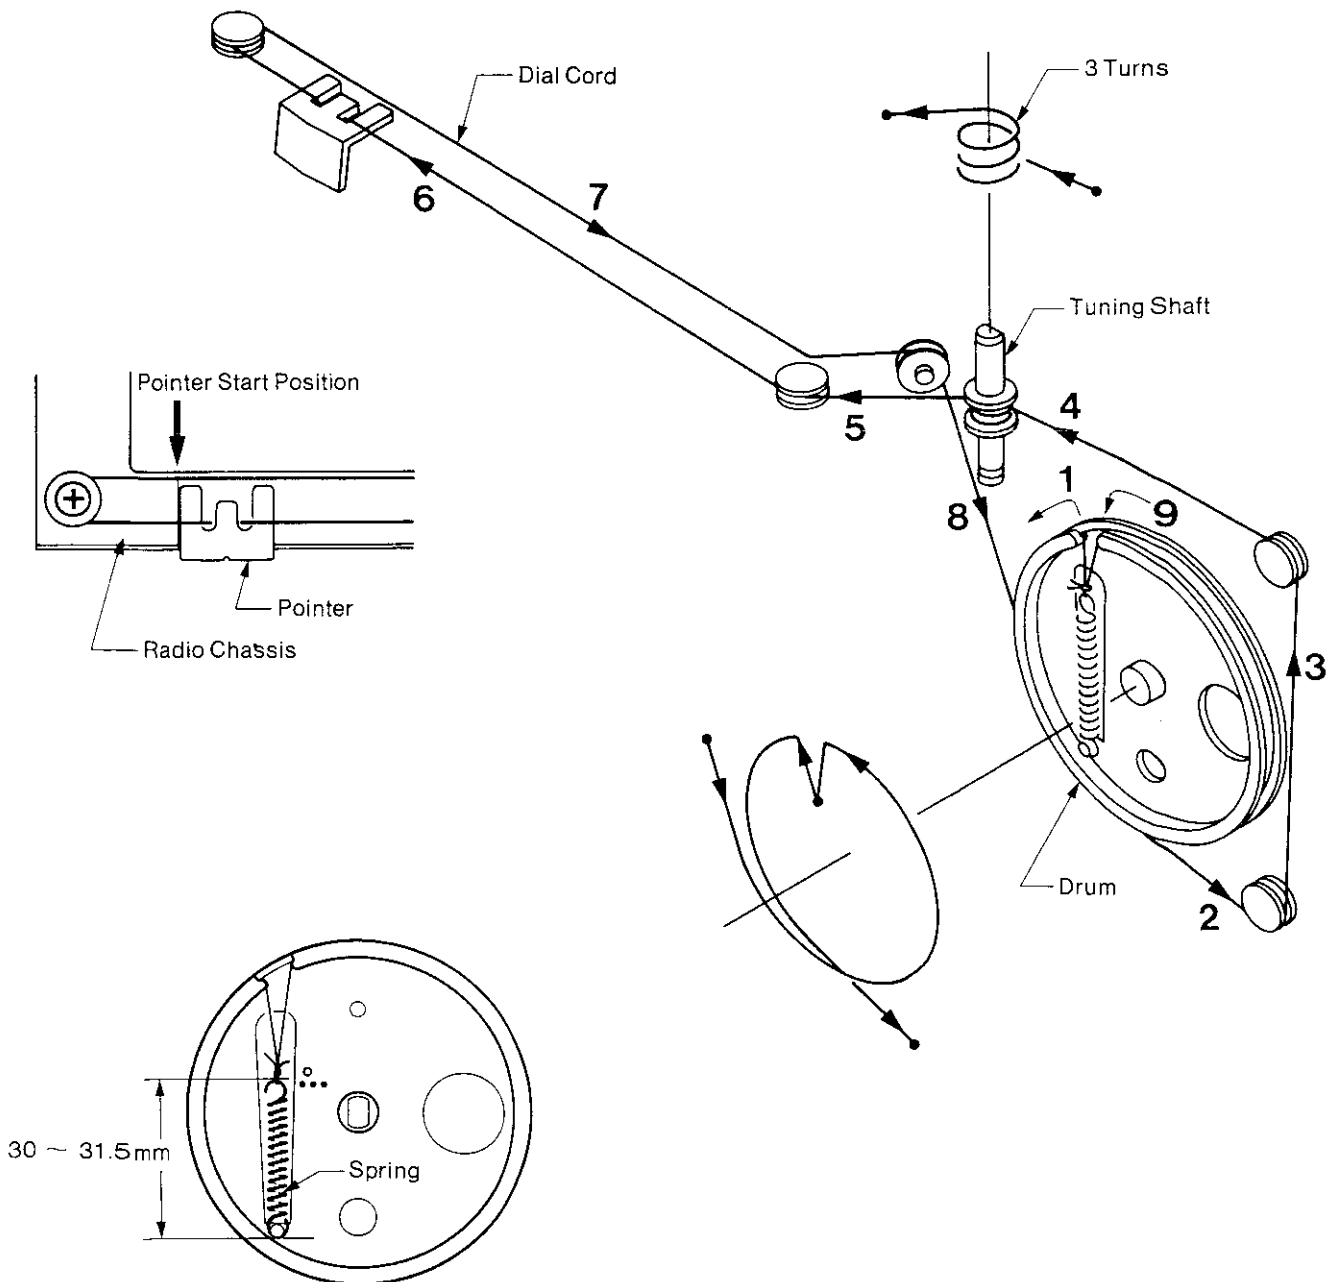


PARTS LIST

Ref. No.	Part No.	Description	Q'ty	Ref. No.	Part No.	Description	Q'ty
PACKAGE							
	141 6 1419 69103	Individual Carton	1	DC7	141 2 8139 10600	Bracket Counter	1
	141 6 1449 88800	Case Styrofoam, Right	1	DC8	141 2 3519 57700	Bracket Arm Eject	1
	141 6 1449 88900	Case Styrofoam, Left	1	DC9	141 2 8519 29400	SPG Stop Lever	1
	141 6 2519 17190	Poly Cover	1	DC10	141 0 1939 00454	Power Supply P.C.B. Assy [See PCB3]	1
	141 6 4559 00100	Serial No. Sheet	3	DC11	141 2 4219 10400	Poly Wave Screw	1
ACCESSORIES							
	4 2419 72222	Cassette	1	DC12	141 2 3829 20800	SPG Battery	1
△	4 2439 70602	Power Cord	1	DC13	141 2 3829 06700	Terminal BAT Anode	1
	141 6 2519 11022	Poly Cover 110 x 220	1	DC14	141 2 3829 18000	SPG Terminal	1
	141 6 2519 18025	Poly Cover 180 x 250	1	DC15	141 2 5119 09400	Pointer	1
	141 6 4729 37314	Caution Label	1	DC16	141 2 1449 56900	Plate Dial	1
	141 6 4729 37377	Caution Label	1	DC17	141 2 4219 14000	Screw	3
	141 6 4799 02800	Label	1	DC18	141 2 5519 03300	Roller Dial A	3
	141 6 4519 07700	Warranty Card	1	DC19	141 2 8259 05900	Roller Dial	2
	142 6 4119 31871	Instruction Book	1	DC20	4 2249 70710	Fine Tuner [FT1]	1
CABINET							
	4 2359 76370	Receptacle	5	DC21	141 2 7519 58400	Shaft Tuning	1
	4 2359 70990	Socket Pin RT	1	DC22	141 0 1939 02110	Switch P.C.B. Assy [See PCB4]	1
CA1	141 0 1119 94500	Cabinet Top Assy	1	DC23	141 2 4469 39300	Cushion Switch	2
Following Speakers are included in Cabinet Top							
	4 1519 71211	Speaker (300Ω) [SP102 & SP202]	2	DC24	141 2 2449 41700	Screen Switch	2
CA2	141 0 1249 25802	Lid Cassette Assy	1	DC25	141 2 1629 06900	Knob Band Select	1
CA3	141 2 8529 06200	Spring Lid Cassette	1	DC26	141 0 1939 02141	Radio Tuner P.C.B. Assy [See PCB2]	1
CA4	141 2 1519 24700	Reflector	1	DC27	141 0 1939 00460	LED Indicator P.C.B. Assy [See PCB5]	1
CA5	141 2 1559 08200	Ring Speaker	2	DC28	141 0 1939 00443	Amplifier P.C.B. Assy [See PCB1]	1
CA6	141 2 1639 55000	Knob Fine Tuning	1	DY1	628 3 0911 00000	String 0.5	1
CA7	141 2 1639 54800	Knob Tuning	1	DY2	102 3 1302 60611	Screw, Pan Hd. Tapping-1, +M2.6x6	2
CA8	141 2 4469 31700	Cushion Mike	2	DY3	102 3 1302 60811	Screw, Pan Hd. Tapping-1, +M2.6x8	4
CA9	141 0 5519 08500	Gear Eject Assy	1	DY4	102 3 1302 61011	Screw, Pan Hd. Tapping-1, +M2.6x10	1
CA10	141 2 1639 54900	Knob Volume	3	DY5	102 3 1302 61411	Screw, Pan Hd. Tapping-1, +M2.6x14	3
CA11	141 2 7419 77200	Lock Lid Cassette	1	DY6	112 3 1303 00040	E Ring, M3.0	1
CA12	141 0 1719 10900	Handle Assy	1	NOTES:			
CA13	141 2 2719 18500	Holder Handle	2	1. Parts order must contain Model Number, Part Number and Description.			
CA14	141 2 1149 31900	Screen Speaker	2	2. Ordering quantity of screws and resistors must be multiple of 10 pcs.			
CA15	4 1519 71660	Speaker (32Ω) [SP101]	1				
CA15	4 1519 71660	Speaker (32Ω) [SP201]	1				
CA16	141 2 3729 00801	Bracket FIX Speaker	4				
CA17	141 2 4469 45601	Cushion	1				
CA18	141 2 1339 31000	Lid Battery	1				
CA19	141 2 1119 92206	Cabinet Bottom	1				
CA20	141 2 2899 30800	Sheet Lid Cassette	1				
CA21	141 2 1649 12900	Knob Band Select	1				
CA22	141 2 4219 09801	Screw	7				
CA23	4 2449 70330	Rod Antenna	1				
CA24	141 2 4729 03001	Lug	1				
CX1	101 3 1302 60613	Screw, Pan Hd., +M2.6x6	1				
CX2	102 3 1302 60811	Screw, Pan Hd. Tapping-1, +M2.6x8	1				
CX3	102 3 1303 01011	Screw, Pan Hd. Tapping-1, +M3.0x10	4				
CX4	143 3 1303 03013	Screw, Pan Hd. Tapping-B, +M3.0x30	1				
RADIO CHASSIS							
	141 2 4729 05300	Wire Band	3				
DC1	141 2 3119 19702	Chassis Radio	1				
DC2	4 1539 70661	Microphone [BM101 & BM201]	2				
DC3	141 2 5389 03400	Drum	1				
DC4	141 2 8519 78000	Spring Stop	1				
DC5	141 2 8119 12201	Counter	1				
DC6	141 2 5649 06000	Belt Counter	1				

CABINET EXPLODED VIEW

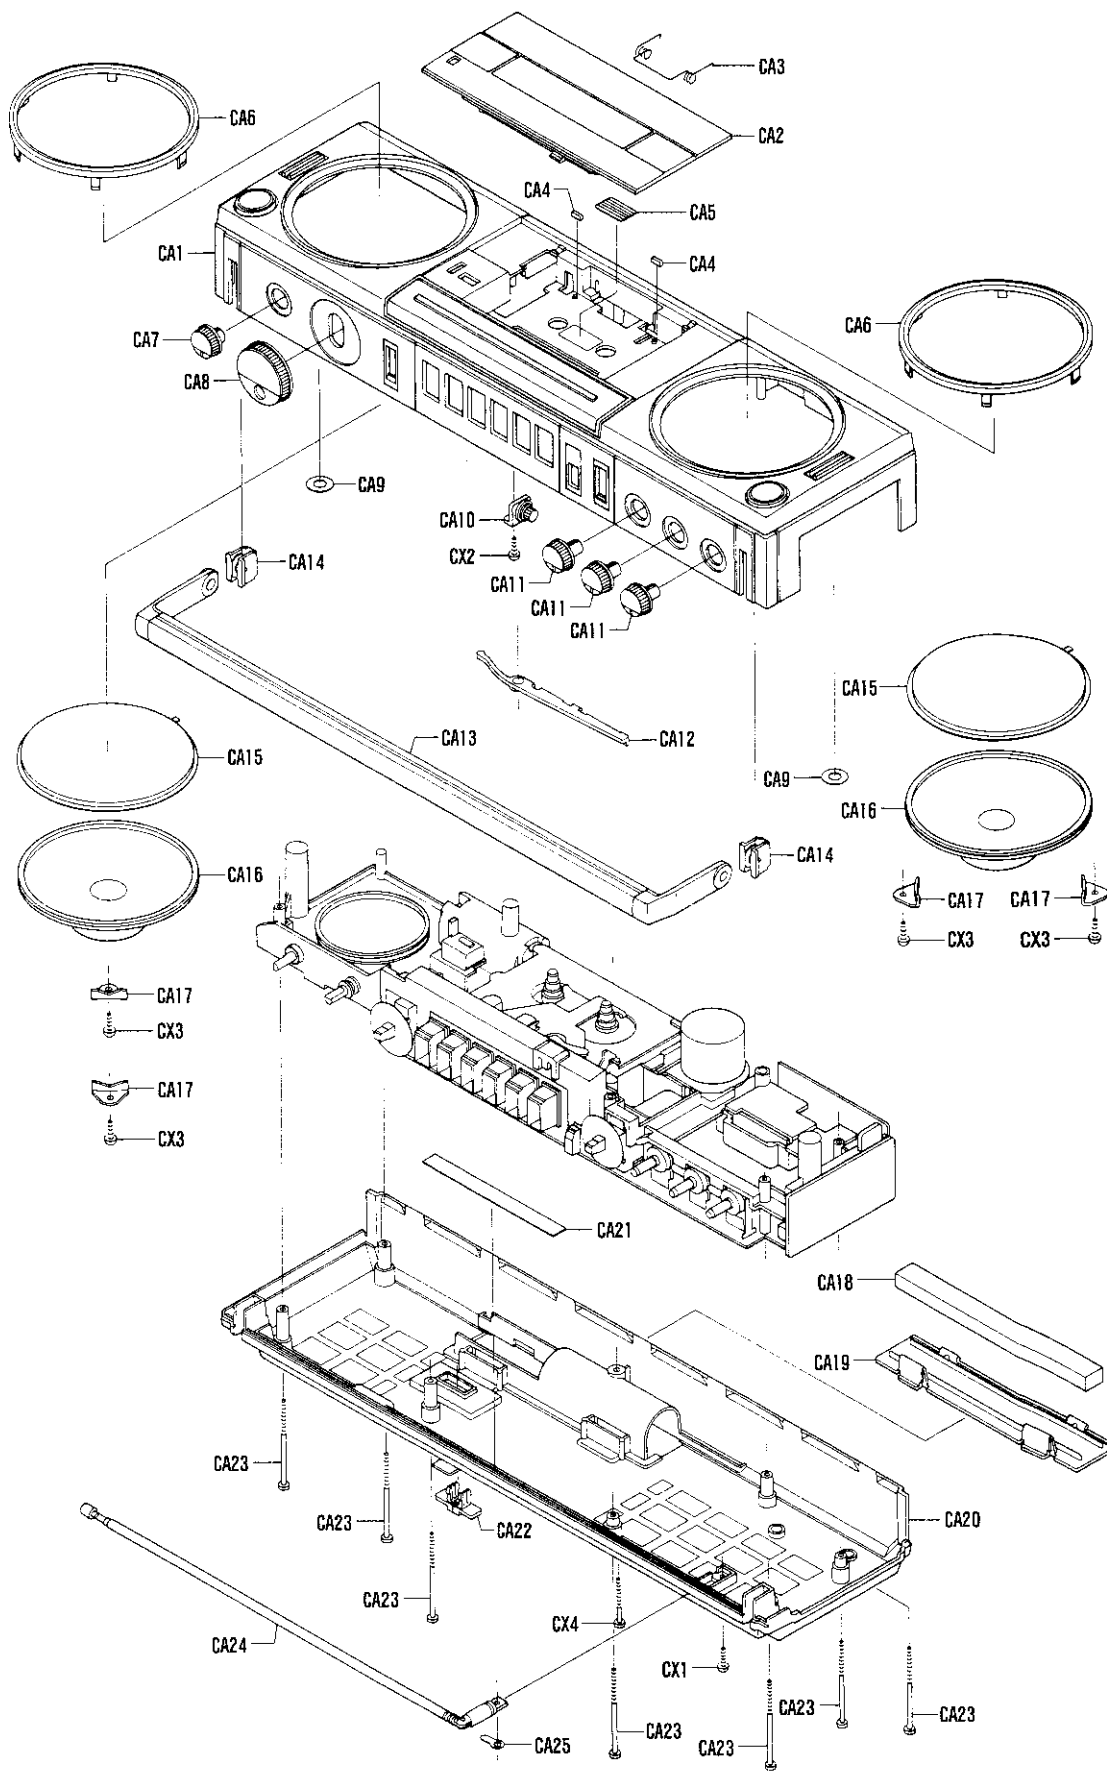

RADIO CHASSIS EXPLODED VIEW

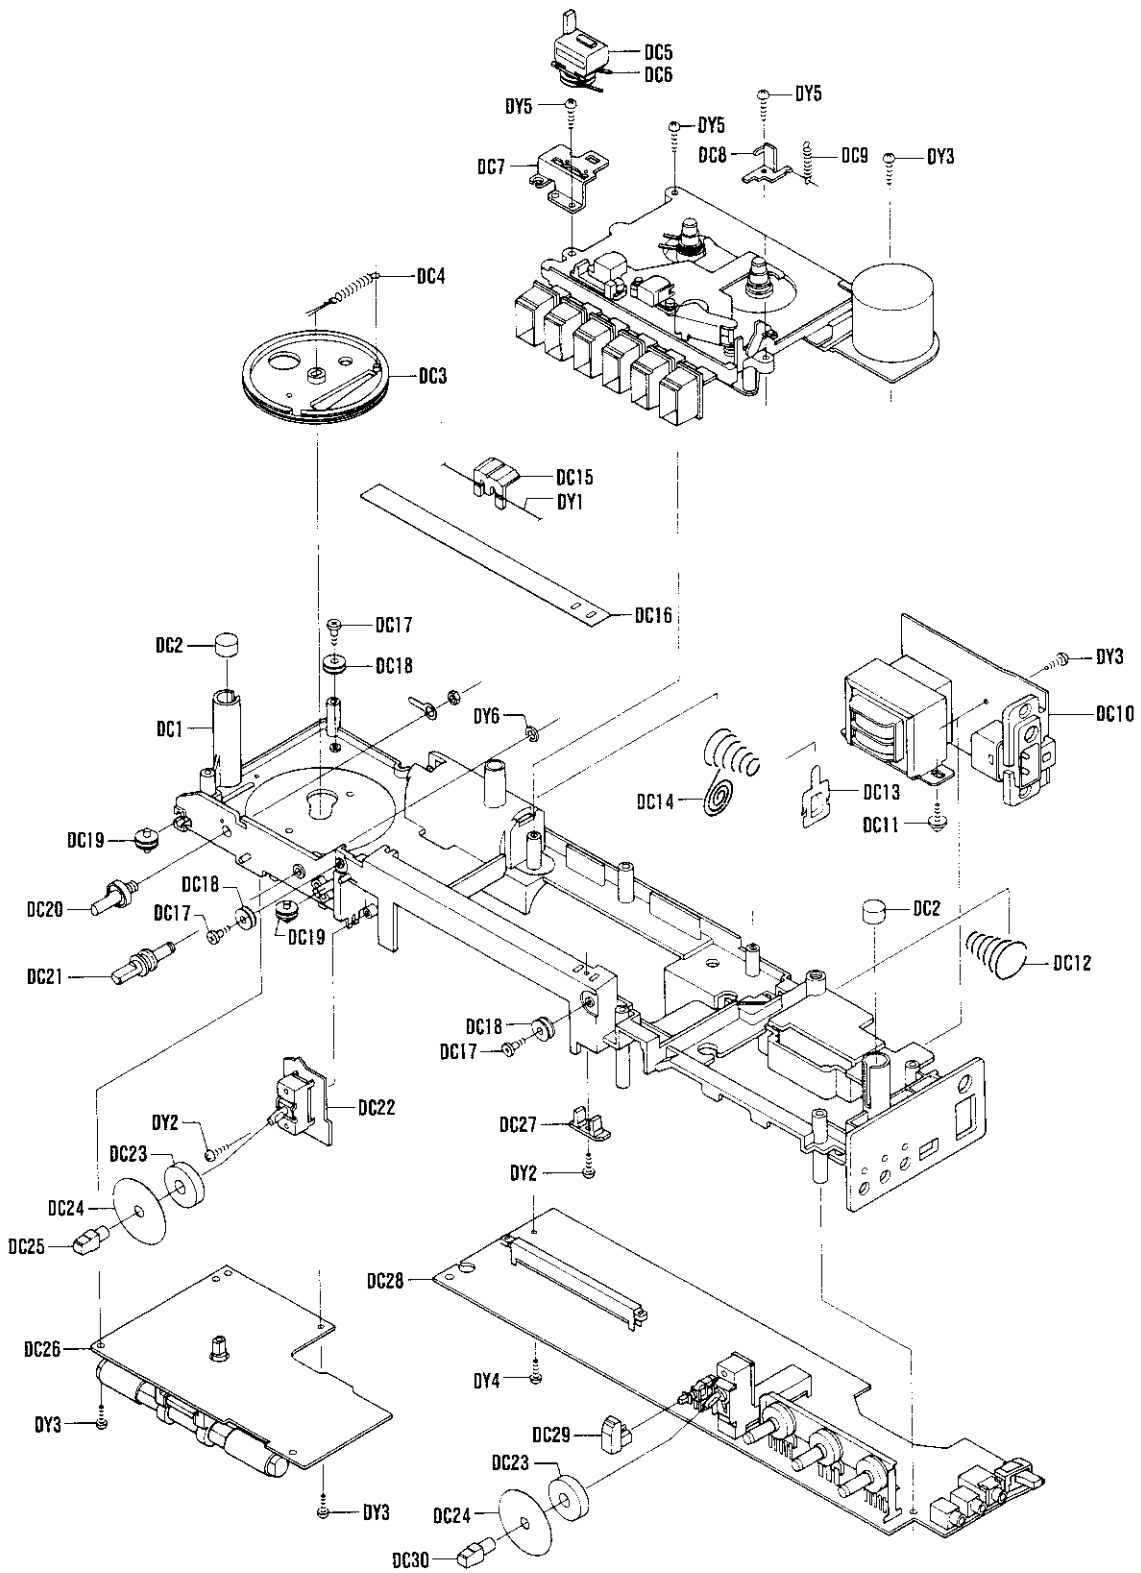


MECHANISM PARTS LIST

Ref. No.	Part No.	Description	Q'ty	Ref. No.	Part No.	Description	Q'ty
MECHANISM				MC64	141 2 3519 57100	Bracket Plate	1
MC1	141 0 3119 19902	Chassis Assy	1	MC65	141 2 8529 05401	Spring Rod Pause	1
MC2	141 2 8519 97300	Spring Interlock	1	MC66	141 2 8529 05400	Spring Rod	1
MC3	141 2 4539 09400	Washer	3	MC67	141 2 8549 10800	Spring Sensor	1
MC4	141 2 8559 01800	Spring Supply	1	MC68	141 2 8519 25400	SPG Click	1
MC5	141 0 5319 05400	Supply Reel Assy	1	MC69	141 2 8549 10600	Spring Rod Play	1
MC6	141 2 4539 15700	Washer	2	MC70	141 2 8529 05600	Spring Stopper REC	1
MC7	4 2319 72121	Switch Leaf (Power) [S8]	1	MC71	141 2 7519 55300	Spindle Lever Lock	1
MC8	141 2 5519 36400	Gear FF	1	MC72	141 2 7419 76500	Lever Lock	1
MC9	141 0 5319 05301	Take-up Reel Assy	1	MC73	141 2 8529 05800	Spring Lever Lock	1
MC10	141 2 8419 10400	Lever Interlock	1	MC74	141 2 8519 33000	SPG Lever Lock Index	1
MC11	141 2 8549 08700	Spring Brake	1	MC75	141 0 7439 09200	Arm Take-up Assy	1
MC12	141 2 7149 05200	Arm Brake	1	MC76	141 2 4539 05500	Washer	1
MC13	141 2 4459 25200	Cover Brake	2	MC77	141 2 5519 36500	Gear Take-up	1
MC14	141 2 7319 43203	Base Slide	1	MC78	141 2 8429 06100	Lever Record Switch	1
MC15	141 2 7419 79500	Lever Sensor	1	MC79	141 2 8519 78000	Spring Stop	1
MC16	141 2 3529 36900	Spacer E Head	1	MC80	4 2319 74990	Leaf Switch (AMSS Switch B) [S7]	1
MC17	4 2429 71521	Erase Head [HD2]	1	MC81	4 2319 72570	Leaf Switch (AMSS Switch A) [S6]	1
MC18	141 2 3529 35300	Spacer Head	1	MC82	141 2 7319 49900	Rod Play	1
MC19	141 2 8559 04400	Spring Azimuth	1	MC83	141 2 1659 19001	Button Play	1
MC20	141 2 4729 01900	Lug	1	MC84	141 2 7319 50000	Rod Record	1
MC21	4 2429 72091	R/P Head [HD1]	1	MC85	141 2 1659 19000	Button Record	1
MC22	141 0 5419 03200	Pinchroller Assy	1	MC86	141 2 7439 26200	Lever Stopper Record	1
MC23	141 2 8519 97200	Spring Pinchroller	1	MC87	141 2 4539 17200	Washer	1
MC24	141 2 8539 41102	Spring Cassette	1	MZ1	101 3 1302 00411	Screw, Pan Hd., +M2.0x4	1
MC25	141 2 8539 45200	Spring Cassette	1	MZ2	101 3 1302 00811	Screw, Pan Hd., +M2.0x8	1
MC26	141 2 8529 07300	Spring Arm Idler	1	MZ3	101 3 1702 00411	Screw, Bind Hd., +M2.0x4	1
MC27	141 2 7419 74900	Lever Cassette-up	1	MZ4	101 3 1702 00611	Screw, Bind Hd., +M2.0x6	1
MC28	141 2 8519 96901	Spring Cassette-up	1	MZ5	101 3 1702 00811	Screw, Bind Hd., +M2.0x8	2
MC29	141 2 4219 13201	Screw Washer	1	MZ6	101 3 3702 00811	Screw, Bind Hd., ±M2.0x8	1
MC30	141 0 7319 24201	Plate Eject Assy	1	MZ7	102 3 1302 00611	Screw, Pan Hd. Tapping-1, +M2.0x6	1
MC31	141 2 8519 38700	SPG Lever Head	1	MZ8	102 3 1302 60811	Screw, Pan Hd. Tapping-1, +M2.6x8	1
MC32	4 5279 71173	Motor [M1]	1	MZ9	103 3 1302 00811	Screw, Pan Hd. Tapping-2, +M2.0x8	3
MC33	141 2 3789 08700	Bracket Motor	1	MZ10	143 3 1702 60811	Screw, Bind Hd. Tapping-B, +M2.6x8	4
MC34	141 2 4459 11800	Cushion Motor	3	MZ11	112 3 1301 20082	E Ring, M1.2	1
MC35	141 2 4219 30100	Screw	3	MZ12	112 3 1302 00082	E Ring, M2.0	1
MC36	141 2 8549 10700	Spring Base Slide	1	MZ13	112 3 1304 00082	E Ring, M4.0	1
MC37	141 2 7319 49300	Plate Lock	1	MZ14	112 3 1706 30040	Grip Ring, M6.3	1
MC38	141 2 1659 19005	Button Stop	1				
MC39	141 2 7319 49500	Rod Stop Eject	1				
MC40	141 2 1659 19003	Button Rewind	1				
MC41	141 2 7319 49800	Rod Rewind	1				
MC42	141 2 7419 75500	Lever Shut Off	1				
MC43	141 2 7419 75800	Lever Pause Lock	1				
MC44	141 2 8529 05700	Spring Pause Lock	1				
MC45	141 2 4539 15800	Washer	2				
MC46	141 2 1659 19002	Button Fast Forward	1				
MC47	141 2 7319 49700	Rod FF	1				
MC48	141 2 1659 19004	Button Pause	1				
MC49	141 0 7319 25200	Rod Pause Assy	1				
MC50	141 2 4219 12100	Screw Washer	1				
MC51	141 0 7439 10400	Arm Idler Assy	1				
MC52	141 2 8259 09100	Roller	1				
MC53	141 2 4539 12100	Washer Spindle	2				
MC54	141 2 5519 36701	Idler Pulley Gear	1				
MC55	141 2 5519 36601	Gear Capstan	1				
MC56	141 2 8519 98200	Spring Flywheel	1				
MC57	141 0 5219 07202	Flywheel Assy	1				
MC58	141 2 5649 20900	Belt Capstan	1				
MC59	141 0 3519 20100	Support FW Assy	1				
MC60	141 2 3769 12100	Spacer Plunger	1				
MC61	4 2649 70349	Solenoid [SL1]	1				
MC62	141 2 4729 00200	Lug	1				
MC63	141 2 8529 07200	Spring Ground	1				

NOTES:

1. Parts order must contain Model Number, Part Number and Description.
2. Ordering quantity of screws and resistors must be multiple of 10 pcs.

MECHANISM EXPLODED VIEW

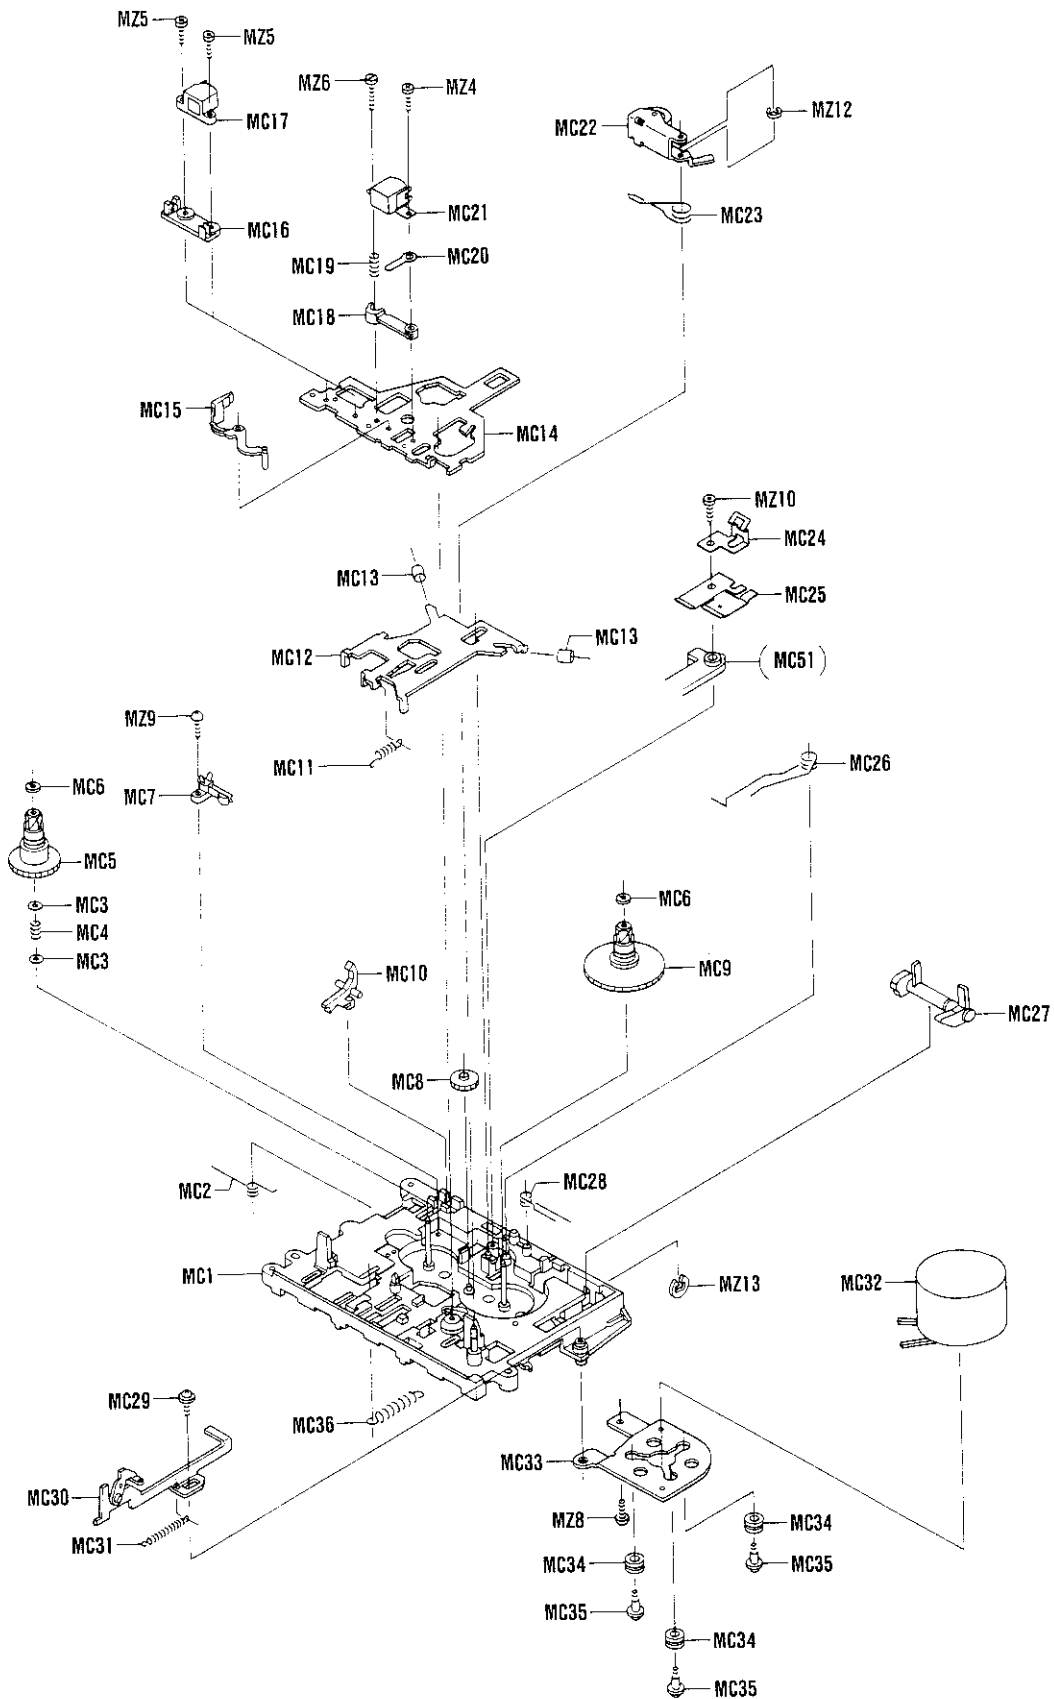

P.C. BOARD PARTS LIST

Ref. No.	Part No.	Description	Q'ty	Ref. No.	Part No.	Description	Q'ty
AMPLIFIER P.C.B. ASSY							
PCB1	141 0 1939 00442	Amplifier P.C.B. Assy	1	C201	CD1 0 4500 0001V	Electrolytic 0.1μF 50V	1
	4 2369 73781	Pin 1P	6	C202	CC2 2 3500 KE00C	Ceramic 0.022μF 50V ±10%	1
	141 2 3689 08400	Radiator IC (for IC302)	1	C204	CC3 3 1500 KE00C	Ceramic 330pF 50V ±10%	1
	141 2 4729 05000	Staple, 5mm	2	C205	CC3 3 1500 KE00C	Ceramic 330pF 50V ±10%	1
	141 2 4729 04700	Staple, 10mm	25	C206	CC2 2 0500 KD00C	Ceramic 22pF 50V ±10%	1
CN1	4 2359 75986	Connector 5P Assy	1	C207	CI1 2 2250 KE00C	Boundary 0.0012μF 25V ±10%	1
S3	4 2319 72191	Slide Switch (Record/Play)	1	C208	CD1 0 7100 0001V	Electrolytic 100μF 10V	1
S4	4 2319 75710	Push Switch (Rec. Mute)	1	C209	CM3 3 3500 K00SV	Mylar 0.033μF 50V ±10%	1
S5	4 2319 76350	Lever Switch (Function)	1	C210	CD1 0 6160 0001V	Electrolytic 10μF 16V	1
S10	4 2319 75590	Slide Switch (Beat Cancel)	1	C211	CD1 0 4500 0001V	Electrolytic 0.1μF 50V	1
J1	4 2359 73470	1P Jack (Mike, Left)	1	C212	CC2 7 2500 KE00C	Ceramic 0.0027μF 50V ±10%	1
J2	4 2359 73470	1P Jack (Mike, Right)	1	C213	CM4 7 3500 K00SV	Mylar 0.047μF 50V ±10%	1
J3	4 2359 75701	Jack 5P With Switch (Headphones)	1	C214	CD4 7 6100 0001V	Electrolytic 47μF 10V	1
L101	4 2729 70480	Coil (33mH)	1	C215	CD1 0 7100 0001V	Electrolytic 100μF 10V	1
L201	4 2729 70480	Coil (33mH)	1	C216	CM1 5 4500 K00SV	Mylar 0.15μF 50V ±10%	1
L301	4 2539 70301	Micro Inductor (100μH)	1	C217	CD1 0 863A 0001V	Electrolytic 1000μF 6.3V	1
L302	4 2539 70301	Micro Inductor (100μH)	1	C218	CC1 0 2500 KE00C	Ceramic 0.001μF 50V ±10%	1
T303	4 2589 71460	OSC Trans	1	C219	CC3 3 2500 KE00C	Ceramic 0.0033μF 50V ±10%	1
VR1	4 2229 73851	Rotary Volume Unit	1	C220	CM4 7 3500 K00SV	Mylar 0.047μF 50V ±10%	1
IC301	4 2069 71710	IC, M 51544 L	1	C221	CC3 3 1500 KE00C	Ceramic 330pF 50V ±10%	1
IC302	206 5 1384 19220	IC, LA 4192 S	1	C222	CC3 3 1500 KE00C	Ceramic 330pF 50V ±10%	1
Q101	203 5 4921 01270	Transistor, 2SD 1012	1	C301	CD1 0 7100 0001V	Electrolytic 100μF 10V	1
Q201	203 5 4921 01270	Transistor, 2SD 1012	1	C302	CD4 7 7100 0001V	Electrolytic 470μF 10V	1
Q301	203 5 5000 53664	Transistor, 2SC 536	1	C303	CD3 3 6100 0001V	Electrolytic 33μF 10V	1
Q302	203 5 5000 53664	Transistor, 2SC 536	1	C304	CD1 0 6160 0001V	Electrolytic 10μF 16V	1
Q303	203 5 5000 53664	Transistor, 2SC 536	1	C305	CD1 0 6160 0001V	Electrolytic 10μF 16V	1
Q304	203 5 5000 53664	Transistor, 2SC 536	1	C306	CD1 0 7100 0001V	Electrolytic 100μF 10V	1
Q305	203 5 5083 33160	Transistor, 2SC 3331	1	C307	CD4 7 6160 0001V	Electrolytic 47μF 16V	1
Q306	203 5 5000 53664	Transistor, 2SC 536	1	C308	CD3 3 6160 0001V	Electrolytic 33μF 16V	1
Q307	203 5 4570 73460	Transistor, 2SD 734	1	C309	CD1 0 5500 0001V	Electrolytic 1μF 50V	1
Q308	203 5 4570 73460	Transistor, 2SD 734	1	C310	CD2 2 7100 0001V	Electrolytic 220μF 10V	1
D101	202 5 2810 44210	Diode, DS 442	1	C311	CD1 0 5500 0001V	Electrolytic 1μF 50V	1
D102	202 5 2810 44210	Diode, DS 442	1	C312	CD2 2 4500 0001V	Electrolytic 0.22μF 50V	1
D103	202 5 2810 44210	Diode, DS 442	1	C313	CD1 0 5500 0001V	Electrolytic 1μF 50V	1
D201	202 5 2810 44210	Diode, DS 442	1	C314	CD2 2 6100 0001V	Electrolytic 22μF 10V	1
D202	202 5 2810 44210	Diode, DS 442	1	C315	CD4 7 6100 0001V	Electrolytic 47μF 10V	1
D203	202 5 2810 44210	Diode, DS 442	1	C317	CD1 0 6100 0001V	Electrolytic 10μF 10V	1
D301	202 5 2450 13540	Diode, DS 135 D	1	C318	CD4 7 7100 0001V	Electrolytic 470μF 10V	1
D302	202 5 3210 06213	Zener Diode, GZA6.2Z	1	C319	CD1 0 7100 0001V	Electrolytic 100μF 10V	1
D303	202 5 9600 44610	Diode, DS 446	1	C320	CD2 2 7100 0001V	Electrolytic 220μF 10V	1
D304	202 5 2810 44210	Diode, DS 442	1	C321	CD1 0 8160 0001V	Electrolytic 1000μF 16V	1
D305	202 5 2810 44210	Diode, DS 442	1	C322	CP1 8 2101 J000V	Polypropylen 0.0018μF 100V ±5%	1
C101	CD1 0 4500 0001V	Electrolytic 0.1μF 50V	1	C323	CM2 2 3500 K00SV	Mylar 0.022μF 50V ±10%	1
C102	CC2 2 3500 KE00C	Ceramic 0.022μF 50V ±10%	1	C324	CM6 8 2500 K00SV	Mylar 0.0068μF 50V ±10%	1
C104	CC3 3 1500 KE00C	Ceramic 330pF 50V ±10%	1	C325	CM2 2 3500 K00SV	Mylar 0.022μF 50V ±10%	1
C105	CC3 3 1500 KE00C	Ceramic 330pF 50V ±10%	1	C326	CD2 2 5100 0001V	Electrolytic 2.2μF 10V	1
C106	CC2 2 0500 KD00C	Ceramic 22pF 50V ±10%	1	C327	CM2 7 3500 K00SV	Mylar 0.027μF 50V ±10%	1
C107	CI1 2 2250 KE00C	Boundary 0.0012μF 25V ±10%	1	C328	CM4 7 2500 K00SV	Mylar 0.0047μF 50V ±10%	1
C108	CD1 0 7100 0001V	Electrolytic 100μF 10V	1	C329	CI2 2 2250 KF00C	Boundary 0.0022μF 25V ±10%	1
C109	CM3 3 3500 K00SV	Mylar 0.033μF 50V ±10%	1	C330	CC2 2 3500 ZG00C	Ceramic 0.022μF 50V +80.-20%	1
C110	CD1 0 6160 0001V	Electrolytic 10μF 16V	1	R101	RD2 2 2251 JN000	Carbon 2.2kΩ 1/4W ±5%	1
C111	CD1 0 4500 0001V	Electrolytic 0.1μF 50V	1	R102	RD3 3 2251 JN000	Carbon 3.3kΩ 1/4W ±5%	1
C112	CC2 7 2500 KE00C	Ceramic 0.0027μF 50V ±10%	1	R103	RD3 3 2251 JN000	Carbon 3.3kΩ 1/4W ±5%	1
C113	CM4 7 3500 K00SV	Mylar 0.047μF 50V ±10%	1	R104	RD2 2 2251 JN000	Carbon 2.2kΩ 1/4W ±5%	1
C114	CD4 7 6100 0001V	Electrolytic 47μF 10V	1	R106	RD3 3 2251 JN000	Carbon 3.3kΩ 1/4W ±5%	1
C115	CD1 0 7100 0001V	Electrolytic 100μF 10V	1	R107	RD1 0 3251 JN000	Carbon 10kΩ 1/4W ±5%	1
C116	CM1 5 4500 K00SV	Mylar 0.15μF 50V ±10%	1	R108	RD5 6 3251 JN000	Carbon 56kΩ 1/4W ±5%	1
C117	CD1 0 863A 0001V	Electrolytic 1000μF 6.3V	1	R109	RD5 6 0251 JN000	Carbon 56Ω 1/4W ±5%	1
C118	CC1 0 2500 KE00C	Ceramic 0.001μF 50V ±10%	1	R110	RD3 9 2251 JN000	Carbon 3.9kΩ 1/4W ±5%	1
C119	CC3 3 2500 KE00C	Ceramic 0.0033μF 50V ±10%	1	R111	RD2 2 1251 JN000	Carbon 220Ω 1/4W ±5%	1
C120	CM4 7 3500 K00SV	Mylar 0.047μF 50V ±10%	1	R112	RD1 0 2251 JN000	Carbon 1kΩ 1/4W ±5%	1
C121	CC3 3 1500 KE00C	Ceramic 330pF 50V ±10%	1	R113	RD3 3 3251 JN000	Carbon 33kΩ 1/4W ±5%	1
C122	CC3 3 1500 KE00C	Ceramic 330pF 50V ±10%	1	R114	RD4 7 2251 JN000	Carbon 4.7kΩ 1/4W ±5%	1
				R115	RD2 7 2251 JN000	Carbon 2.7kΩ 1/4W ±5%	1

P.C. BOARD PARTS LIST (Continued)

Ref. No.	Part No.	Description	Q'ty	Ref. No.	Part No.	Description	Q'ty
R116	RD5 6 0251 JN000	Carbon 56Ω 1/4W ±5%	1	L1	4 2599 70810	RF Coil	1
R117	RD4 7 0251 JN000	Carbon 47Ω 1/4W ±5%	1	L2	4 2589 71960	FM OSC Trans	1
R118	RD3 3 3251 JS000	Carbon 33kΩ 1/4W ±5%	1	L3	4 2659 70241	Loading Coil	1
R119	RD3 9 2251 JN000	Carbon 3.9kΩ 1/4W ±5%	1	L4	4 2579 71480	Bar Antenna	1
R120	RD1 0 3251 JN000	Carbon 10kΩ 1/4W ±5%	1	L5	4 2539 71021	Band Pass Filter	1
R121	RD1 2 4251 JN000	Carbon 120kΩ 1/4W ±5%	1	T1	4 2569 70301	IFT	1
R201	RD2 2 2251 JN000	Carbon 2.2kΩ 1/4W ±5%	1	T2	4 2569 71340	IFT FM	1
R202	RD3 3 2251 JN000	Carbon 3.3kΩ 1/4W ±5%	1	T3	4 2569 71030	IFT 455kHz	1
R203	RD3 3 2251 JN000	Carbon 3.3kΩ 1/4W ±5%	1	T4	4 2569 71022	IFT 455kHz	1
R204	RD2 2 2251 JN000	Carbon 2.2kΩ 1/4W ±5%	1	T5	4 2569 71120	IFT AM	1
R206	RD3 3 2251 JN000	Carbon 3.3kΩ 1/4W ±5%	1	T6	4 2579 70722	Antenna Coil	1
R207	RD1 0 3251 JN000	Carbon 10kΩ 1/4W ±5%	1	T7	4 2589 71422	OSC Trans SW	1
R208	RD5 6 3251 JN000	Carbon 56kΩ 1/4W ±5%	1	T8	4 2589 71410	OSC Trans	1
R209	RD5 6 0251 JN000	Carbon 56Ω 1/4W ±5%	1	T9	4 2589 71400	OSC Trans	1
R210	RD3 9 2251 JN000	Carbon 3.9kΩ 1/4W ±5%	1	P1	4 2229 73053	Potentiometer (B-5kΩ)	1
R211	RD2 2 1251 JN000	Carbon 220Ω 1/4W ±5%	1	CF1	4 2539 70184	Ceramic Filter	1
R212	RD1 0 2251 JN000	Carbon 1kΩ 1/4W ±5%	1	CF2	4 2539 70184	Ceramic Filter	1
R213	RD3 3 3251 JN000	Carbon 33kΩ 1/4W ±5%	1	TC1	4 2249 70580	Trimmer Condenser	1
R214	RD4 7 2251 JN000	Carbon 4.7kΩ 1/4W ±5%	1	TC2	4 2249 70590	Trimmer Condenser	1
R215	RD2 7 2251 JN000	Carbon 2.7kΩ 1/4W ±5%	1	TC3	4 2249 70580	Trimmer Condenser	1
R216	RD5 6 0251 JN000	Carbon 56Ω 1/4W ±5%	1	TC4	4 2249 70580	Trimmer Condenser	1
R217	RD4 7 0251 JN000	Carbon 47Ω 1/4W ±5%	1	TC5	4 2249 70590	Trimmer Condenser	1
R218	RD3 3 3251 JS000	Carbon 33kΩ 1/4W ±5%	1	PVC1	4 2249 70791	Variable Condenser	1
R219	RD3 9 2251 JN000	Carbon 3.9kΩ 1/4W ±5%	1	IC1	4 2069 71842	IC, BA 4404	1
R220	RD1 0 3251 JN000	Carbon 10kΩ 1/4W ±5%	1	IC2	4 2069 71730	IC, TA 7640 AP	1
R221	RD1 2 4251 JN000	Carbon 120kΩ 1/4W ±5%	1	IC3	4 2069 71660	IC, TA 7343 P	1
R301	RD2 2 5251 JN000	Carbon 2.2MΩ 1/4W ±5%	1	Q1	4 2039 70460	Transistor, 2SC 1675 K	1
R302	RD1 0 3251 JN000	Carbon 10kΩ 1/4W ±5%	1	D1	202 5 2810 44210	Diode, DS 442	1
R303	RD5 6 3251 JN000	Carbon 56kΩ 1/4W ±5%	1	C1	CC2 2 3160 XG00R	Boundary 0.022μF 16V +40,-20%	1
R304	RD1 0 1251 JS000	Carbon 100Ω 1/4W ±5%	1	C2	CC2 2 3160 XG00R	Boundary 0.022μF 16V +40,-20%	1
R305	RD1 0 1251 JN000	Carbon 100Ω 1/4W ±5%	1	C3	CC2 2 0500 JD00C	Ceramic 22pF 50V ±5%	1
R306	RD1 0 2251 JN000	Carbon 1kΩ 1/4W ±5%	1	C4	CC1 8 0500 JD00C	Ceramic 18pF 50V ±5%	1
R307	RD2 2 2251 JN000	Carbon 2.2kΩ 1/4W ±5%	1	C5	CC2 2 3160 XG00R	Boundary 0.022μF 16V +40,-20%	1
R308	RD1 0 1251 JN000	Carbon 100Ω 1/4W ±5%	1	C6	CC5 0 A500 CD00C	Ceramic 5pF 50V ±0.2pF	1
R309	RD3 9 2251 JN000	Carbon 390Ω 1/4W ±5%	1	C7	CC1 5 0500 JD00C	Ceramic 15pF 50V ±5%	1
R310	RD3 3 4251 JN000	Carbon 330kΩ 1/4W ±5%	1	C8	CC1 0 0500 JD00C	Ceramic 10pF 50V ±5%	1
R311	RD2 2 2251 JN000	Carbon 2.2kΩ 1/4W ±5%	1	C9	CC2 2 3160 XG00R	Boundary 0.022μF 16V +40,-20%	1
R312	RD1 0 1251 JN000	Carbon 100Ω 1/4W ±5%	1	C10	CC2 2 3160 XG00R	Boundary 0.022μF 16V +40,-20%	1
R313	RD3 9 4251 JN000	Carbon 390kΩ 1/4W ±5%	1	C11	CC2 2 3160 XG00R	Boundary 0.022μF 16V +40,-20%	1
R314	RD3 9 2251 JN000	Carbon 3.9kΩ 1/4W ±5%	1	C12	CC2 2 3160 XG00R	Boundary 0.022μF 16V +40,-20%	1
R315	RD3 9 1251 JN000	Carbon 390Ω 1/4W ±5%	1	C13	CC4 7 1500 KE00C	Ceramic 470pF 50V ±10%	1
R317	RD3 9 3251 JN000	Carbon 39kΩ 1/4W ±5%	1	C14	CC2 2 3160 XG00R	Boundary 0.022μF 16V +40,-20%	1
R319	RD1 0 2251 JN000	Carbon 1kΩ 1/4W ±5%	1	C15	CC2 2 3160 XG00R	Boundary 0.022μF 16V +40,-20%	1
R320	RD3 9 3251 JN000	Carbon 39kΩ 1/4W ±5%	1	C16	CD1 0 6100 0000V	Electrolytic 10μF 10V	1
R321	RD2 7 2251 JN000	Carbon 2.7kΩ 1/4W ±5%	1	C17	CD2 2 6100 0000V	Electrolytic 22μF 10V	1
R322	RD4 7 1251 JN000	Carbon 470Ω 1/4W ±5%	1	C18	CC6 0 A500 CD00C	Ceramic 6pF 50V ±0.2pF	1
R323	RD3 3 2251 JN000	Carbon 3.3kΩ 1/4W ±5%	1	C19	CD1 0 5100 0000V	Electrolytic 1μF 10V	1
R324	RD1 0 3251 JN000	Carbon 10kΩ 1/4W ±5%	1	C20	CD1 0 5100 0000V	Electrolytic 1μF 10V	1
R325	RD3 3 0251 JN000	Carbon 33Ω 1/4W ±5%	1	C21	CD3 3 5100 0000V	Electrolytic 3.3μF 10V	1
R326	RD6 8 1251 JN000	Carbon 680Ω 1/4W ±5%	1	C22	CS1 0 2500 J010V	Polystyroul 0.001μF 50V ±5%	1
R327	RD5 6 A251 JN000	Carbon 5.6Ω 1/4W ±5%	1	C23	CD1 0 6100 0000V	Electrolytic 10μF 10V	1
R328	RD3 3 1251 JN000	Carbon 330Ω 1/4W ±5%	1	C24	CC1 0 3250 KE00C	Boundary 0.01μF 25V ±10%	1
R329	RD1 0 2251 JS000	Carbon 1kΩ 1/4W ±5%	1	C25	CC1 0 3250 KE00C	Boundary 0.01μF 25V ±10%	1
R330	RD5 6 A251 JN000	Carbon 5.6Ω 1/4W ±5%	1	C26	CD1 0 4500 0000V	Electrolytic 0.1μF 50V	1
R331	RD4 7 2251 JN000	Carbon 4.7kΩ 1/4W ±5%	1	C27	CD1 0 4500 0000V	Electrolytic 0.1μF 50V	1
				C28	CC5 6 2250 KE00C	Boundary 0.0056μF 25V ±10%	1
				C29	CC5 6 2250 KE00C	Boundary 0.0056μF 25V ±10%	1
				C30	CC2 2 3250 KE00C	Boundary 0.022μF 25V ±10%	1
				C31	CD4 7 7100 0000V	Electrolytic 470μF 10V	1
				C32	CC1 0 2500 KE00R	Ceramic 0.001μF 50V ±10%	1
				C33	CC2 2 3160 XG00R	Boundary 0.022μF 16V +40,-20%	1
				C34	CC1 5 0500 JD00C	Ceramic 15pF 50V ±5%	1
				C36	CC1 0 0500 JD00C	Ceramic 10pF 50V ±5%	1
				C37	CC2 7 0500 JD00C	Ceramic 27pF 50V ±5%	1
RADIO TUNER P.C.B. ASSY							
PCB2	141 0 1939 02140	Radio Tuner P.C.B. Assy	1				
	4 2369 70740	Pin RT	5				
	141 2 4729 04700	Staple, 10mm	6				
	141 2 4729 05000	Staple, 5mm	11				
CN1	4 2369 73380	Connector 5P	1				
S1	4 2319 73861	Slide Switch (Band Select)	1				

P.C. BOARD PARTS LIST (Continued)

Ref. No.	Part No.	Description	Q'ty
C38	CC1 0 0500 JD00C	Ceramic 10pF 50V ±5%	1
C39	CC5 0 A500 CD00C	Ceramic 5pF 50V ±0.2pF	1
C40	CP3 1 2101 J002V	Polypropylen 0.0031μF 100V ±5%	1
C41	CP3 6 1101 J002V	Polypropylen 360pF 100V ±5%	1
C42	CP2 0 1101 J002V	Polypropylen 200pF 100V ±5%	1
C43	CC2 0 0500 JD00C	Ceramic 20pF 50V ±5%	1
C44	CC1 8 0500 JD00C	Ceramic 18pF 50V ±5%	1
C45	CC1 0 1500 KE00C	Ceramic 100pF 50V ±10%	1
C46	CI2 2 3160 XG00R	Boundary 0.022μF 16V +40.-20%	1
C47	CI2 2 3250 KE00C	Boundary 0.022μF 25V ±10%	1
C48	CI2 2 3250 KE00C	Boundary 0.022μF 25V ±10%	1
C49	CI2 2 3160 XG00R	Boundary 0.022μF 16V +40.-20%	1
C50	CI3 3 2250 KE00C	Boundary 0.0033μF 25V ±10%	1
C51	CI3 3 2250 KE00C	Boundary 0.0033μF 25V ±10%	1
C52	CC2 2 3500 KEX0C	Ceramic 0.022μF 50V ±10%	1
R1	RP1 0 0121 JH000	Carbon 10Ω 1/8W ±5%	1
R2	RP2 2 1121 JH000	Carbon 220Ω 1/8W ±5%	1
R3	RP2 2 2121 JH000	Carbon 2.2kΩ 1/8W ±5%	1
R4	RP3 3 4121 JH000	Carbon 330kΩ 1/8W ±5%	1
R5	RD3 3 4251 JM000	Carbon 330kΩ 1/4W ±5%	1
R6	RP3 3 4121 JH000	Carbon 330kΩ 1/8W ±5%	1
R7	RP3 3 2121 JH000	Carbon 3.3kΩ 1/8W ±5%	1
R8	RP4 7 0121 JH000	Carbon 47Ω 1/8W ±5%	1
R9	RP4 7 0121 JH000	Carbon 47Ω 1/8W ±5%	1
R10	RP1 0 2121 JH000	Carbon 1kΩ 1/8W ±5%	1
R11	RP1 0 3121 JH000	Carbon 10kΩ 1/8W ±5%	1
R12	RP5 6 1121 JH000	Carbon 560Ω 1/8W ±5%	1
R13	RP1 5 4121 JH000	Carbon 150kΩ 1/8W ±5%	1
R14	RP1 5 2121 JH000	Carbon 1.5kΩ 1/8W ±5%	1
R15	RP1 5 2121 JH000	Carbon 1.5kΩ 1/8W ±5%	1
R16	RP1 0 2121 JH000	Carbon 1kΩ 1/8W ±5%	1
R17	RP1 0 2121 JH000	Carbon 1kΩ 1/8W ±5%	1
R18	RP4 7 0121 JH000	Carbon 47Ω 1/8W ±5%	1
R19	RP3 3 3121 JH000	Carbon 33kΩ 1/8W ±5%	1
R20	RP3 3 3121 JH000	Carbon 33kΩ 1/8W ±5%	1
R21	RP1 0 1121 JH000	Carbon 100Ω 1/8W ±5%	1
R22	RP2 2 2121 JH000	Carbon 2.2kΩ 1/8W ±5%	1
R23	RP1 0 0121 JH000	Carbon 10Ω 1/8W ±5%	1
R24	RP3 3 0121 JH000	Carbon 33Ω 1/8W ±5%	1
R25	RP2 2 2121 JH000	Carbon 2.2kΩ 1/8W ±5%	1
R26	RP4 7 4121 JH000	Carbon 470kΩ 1/8W ±5%	1
R27	RP1 0 2121 JH000	Carbon 1kΩ 1/8W ±5%	1
R28	RP1 0 2121 JH000	Carbon 1kΩ 1/8W ±5%	1
R29	RP4 7 2121 JH000	Carbon 4.7kΩ 1/8W ±5%	1
R30	RP1 0 2121 JH000	Carbon 1kΩ 1/8W ±5%	1

POWER SUPPLY P.C.B. ASSY

PCB3	141 0 1939 00453	Power Supply P.C.B. Assy	1
	4 2359 70910	Holder Fuse	2
	141 2 4359 21300	Socket Cover	1
	141 2 4729 04700	Staple, 10mm	1
S9	△ 4 2319 75770	Rotary Switch (Voltage Selct)	1
J4	△ 4 2359 73682	AC DC Power Socket	1
T501	△ 4 2519 73861	Power Trans EV2	1
F501	△ 4 2349 70140	Fuse (T 1A)	1
D501	202 5 2320 13110	Diode, DS 131 A	1
D502	202 5 2320 13210	Diode, DS 132 A	1
C501	CC2 2 3500 ZG00C	Ceramic 0.022μF 50V +80.-20%	1
C502	CC2 2 3500 ZG00C	Ceramic 0.022μF 50V +80.-20%	1
C503	CC2 2 3500 ZG00C	Ceramic 0.022μF 50V +80.-20%	1
C504	CC2 2 3500 ZG00C	Ceramic 0.022μF 50V +80.-20%	1
C505	CD2 2 8160 0001V	Electrolytic 2200μF 16V	1

Ref. No.	Part No.	Description	Q'ty
SWITCH P.C.B. ASSY			
PCB4	141 0 1939 02110	Switch P.C.B. Assy	1
	4 2262 15340	PCB, Switch	1
S2	4 2319 75720	Lever Switch Zpzt (FM Mode)	1
LED INDICATOR P.C.B. ASSY			
PCB5	141 0 1939 00460	LED Indicator P.C.B. Assy	1
	4 2269 39410	PCB, LED	1
D401	4 2029 71420	LED, SLP 155 B (REC./Battery)	1
D402	4 2029 71420	LED, SLP 155 B (FM Stereo)	1

NOTES:

- Parts order must contain Model Number, Part Number and Description.
- Ordering quantity of screws and resistors must be multiple of 10 pcs.


PRODUCT SAFETY NOTICE

Each precaution in this manual should be followed during servicing. Components identified with the IEC symbol Δ in the parts list and the schematic diagram designate components in which safety can be of special significance. When replacing a component identified with Δ , use only the replacement parts designated, or parts with the same ratings of resistance, wattage or voltage that are designated in the parts list in this manual. Leakage-current or resistance measurements must be made to determine that exposed parts are acceptably insulated from the supply circuit before returning the product to the customer.


IC & TRANSISTOR LEAD IDENTIFICATION

TRANSISTOR	FRONT VIEW	BOTTOM VIEW
2SC536 2SC1675 2SC3331 2SD734		
2SD1012		
TERMINAL NAME		
B — BASE C — COLLECTOR E — EMITTER		


TA7640AP BOTTOM VIEW

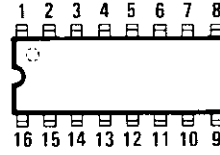


TA7343P FRONT/BOTTOM VIEWS

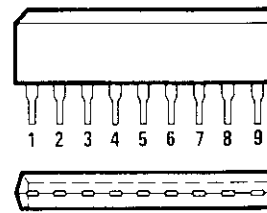


BA4404 FRONT/BOTTOM VIEWS

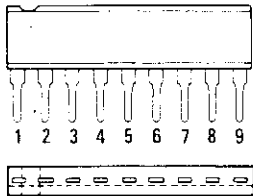


LA4192S BOTTOM VIEW

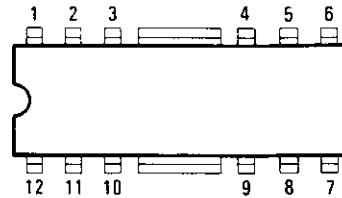

M51544L FRONT/BOTTOM VIEWS

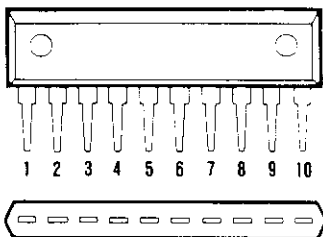


TA7640AP BLOCK DIAGRAM

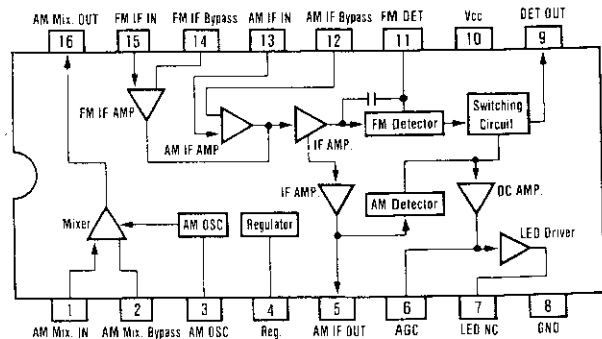


IC & TRANSISTOR LEAD IDENTIFICATION (Continued)


TA7343P BLOCK DIAGRAM

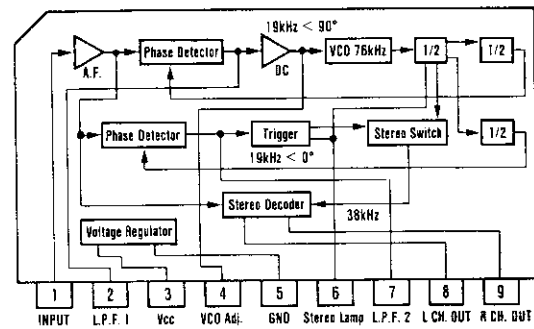


BA4404 BLOCK DIAGRAM

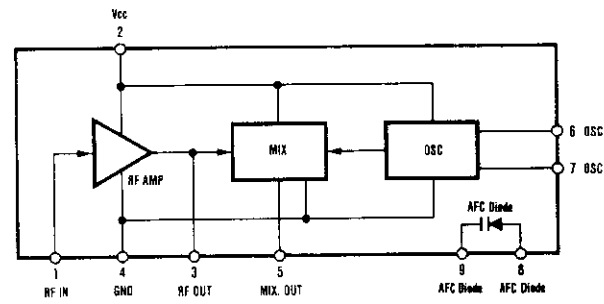


LA4192S BLOCK DIAGRAM

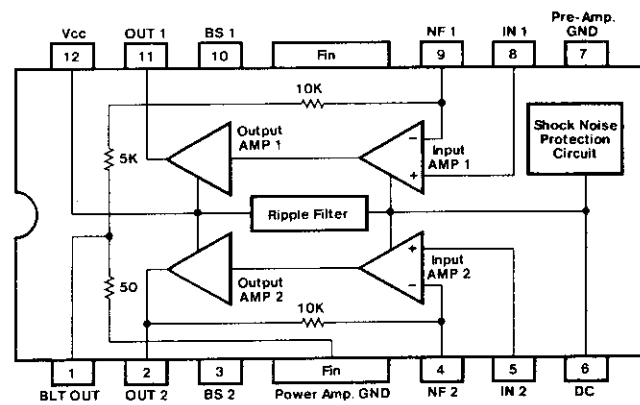


M51544L BLOCK DIAGRAM

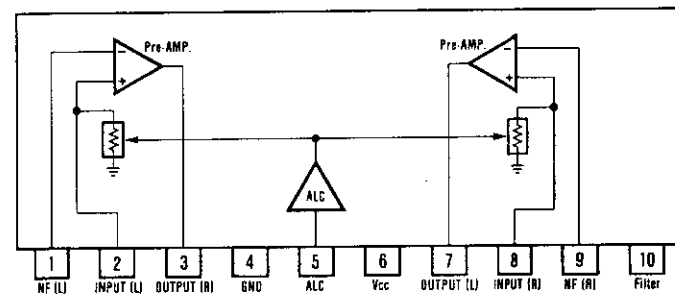


POWER SUPPLY P.C. BOARD

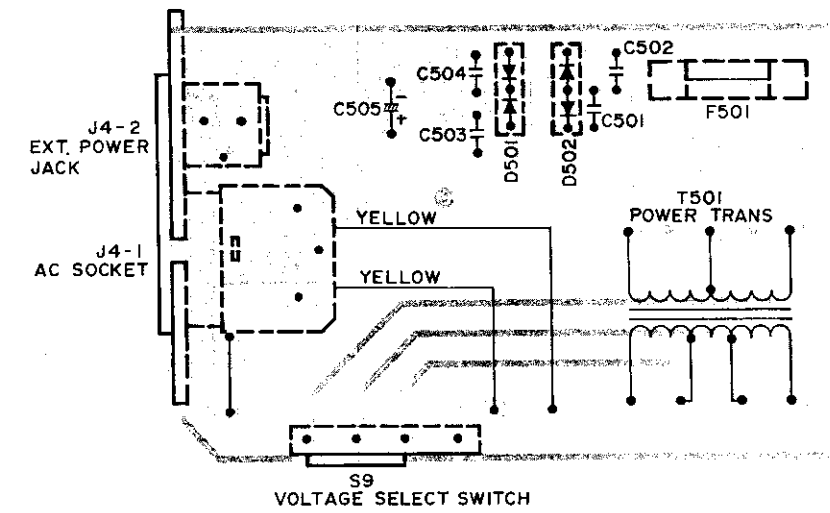


RADIO TUNER P.C. BOARD

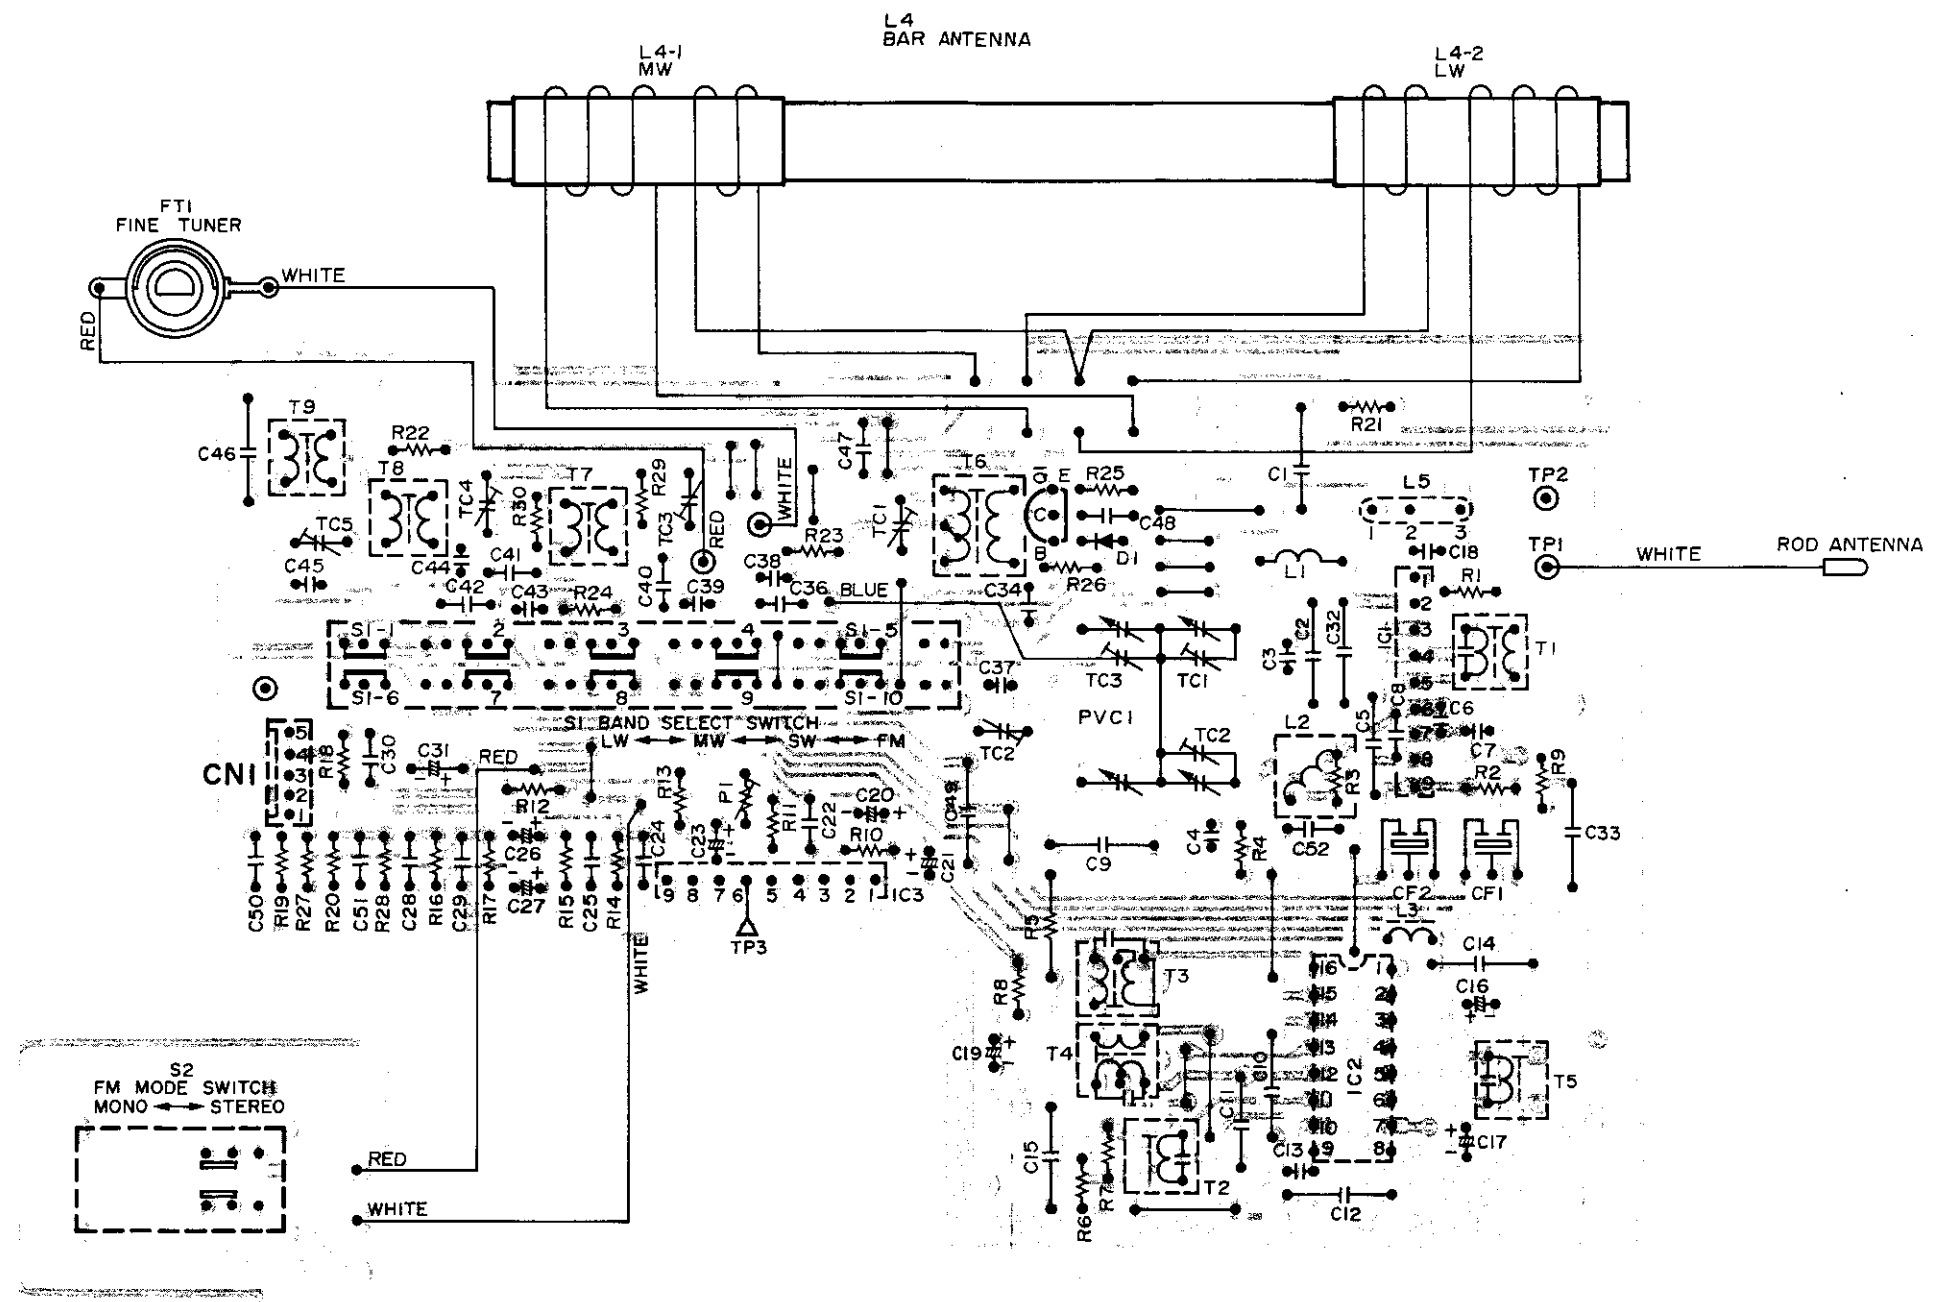


SCHEMATIC DIAGRAM (Tuner)

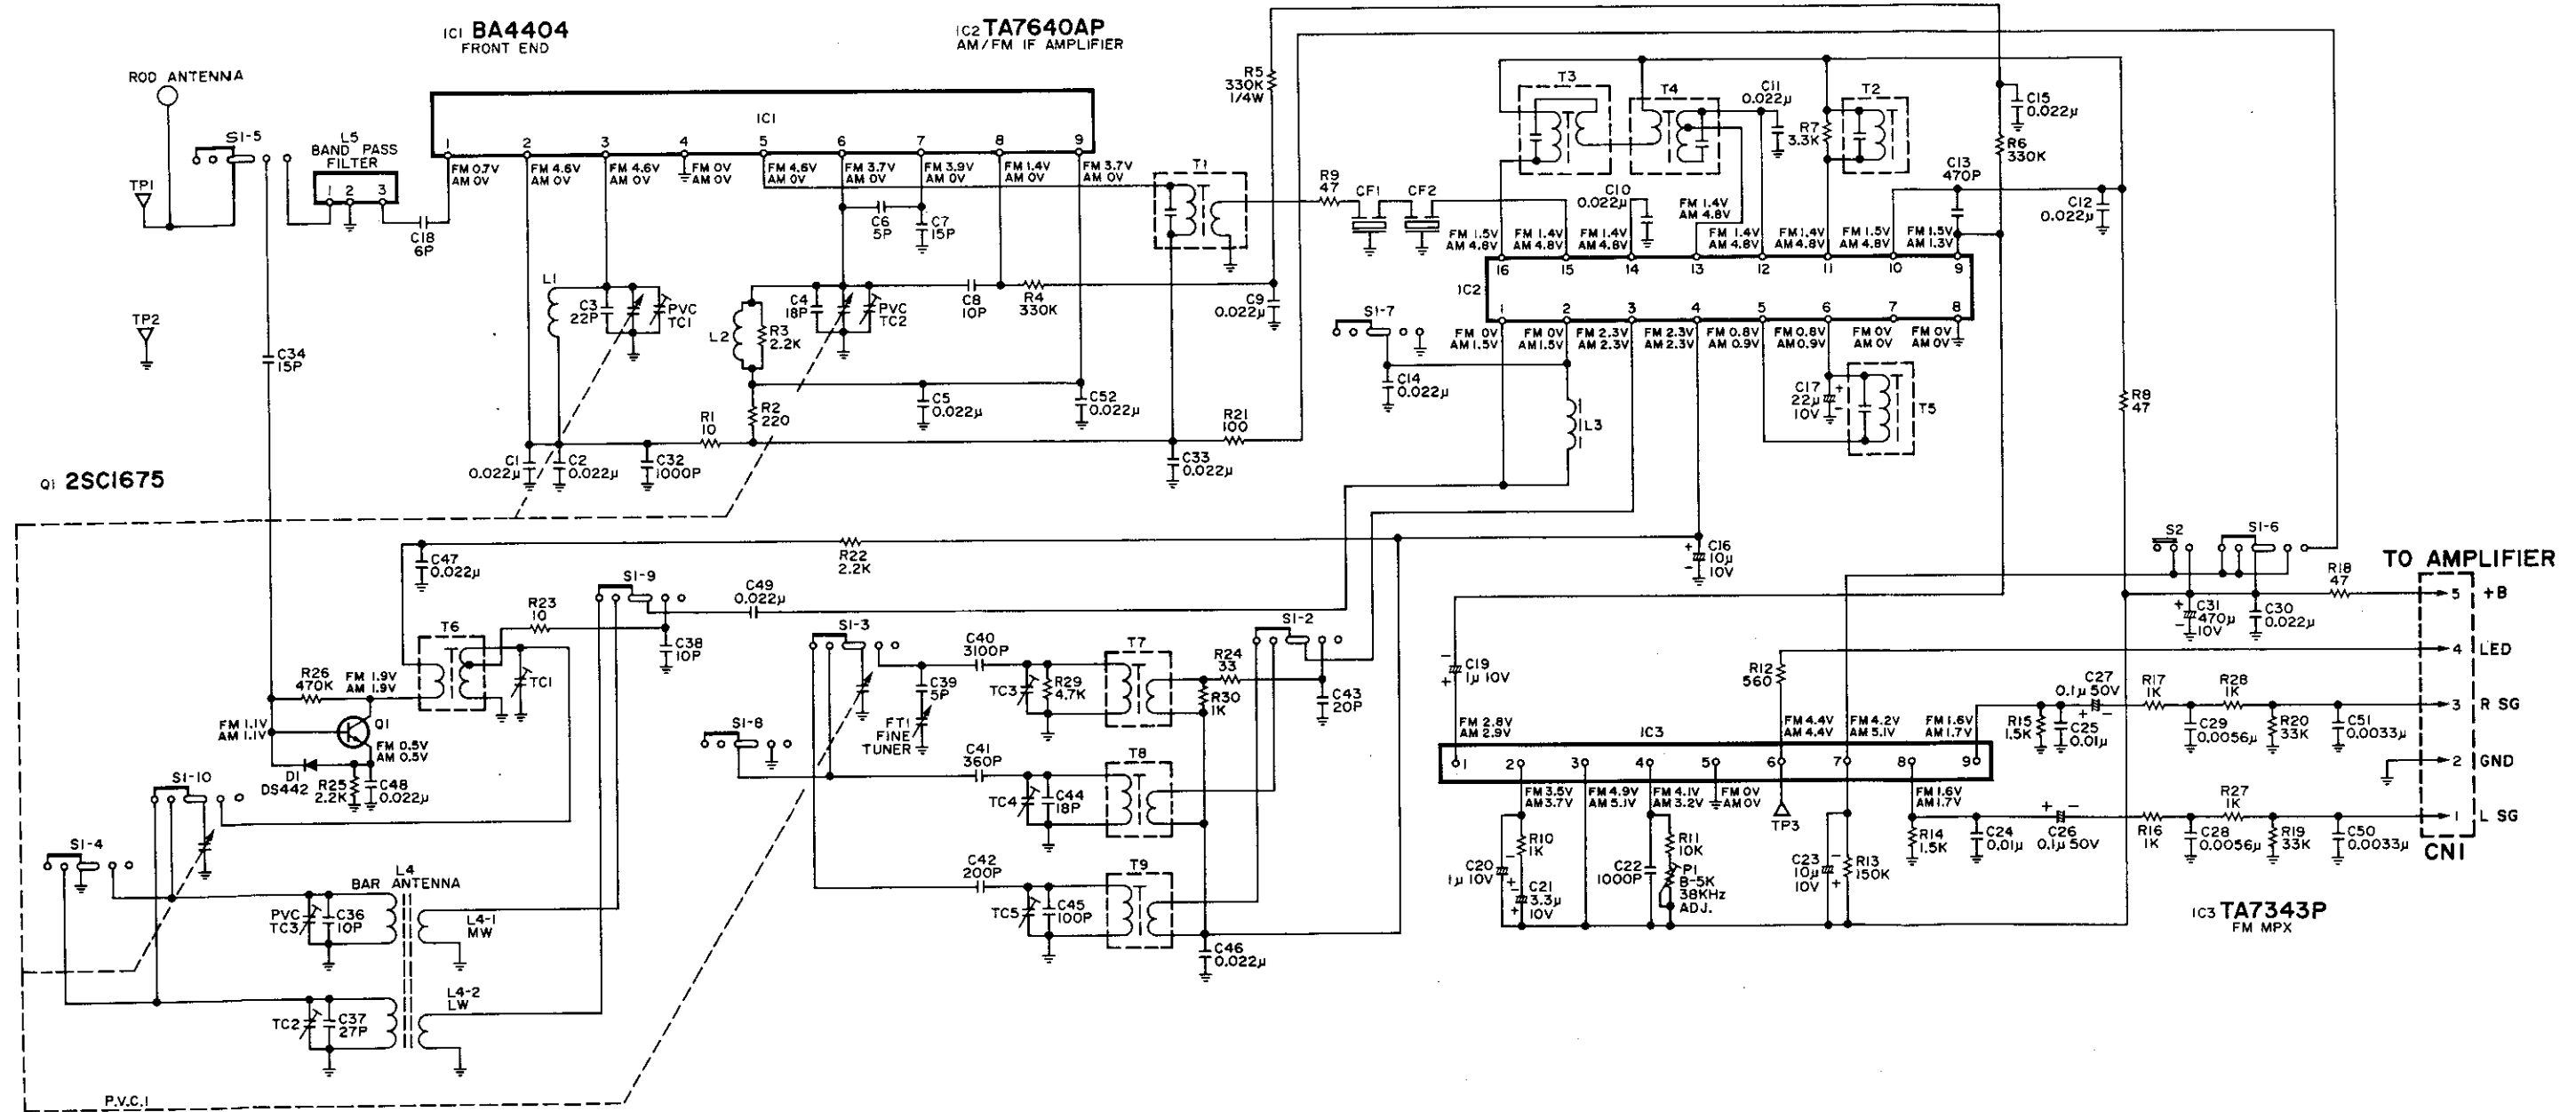


SCHEMATIC DIAGRAM (Tuner)

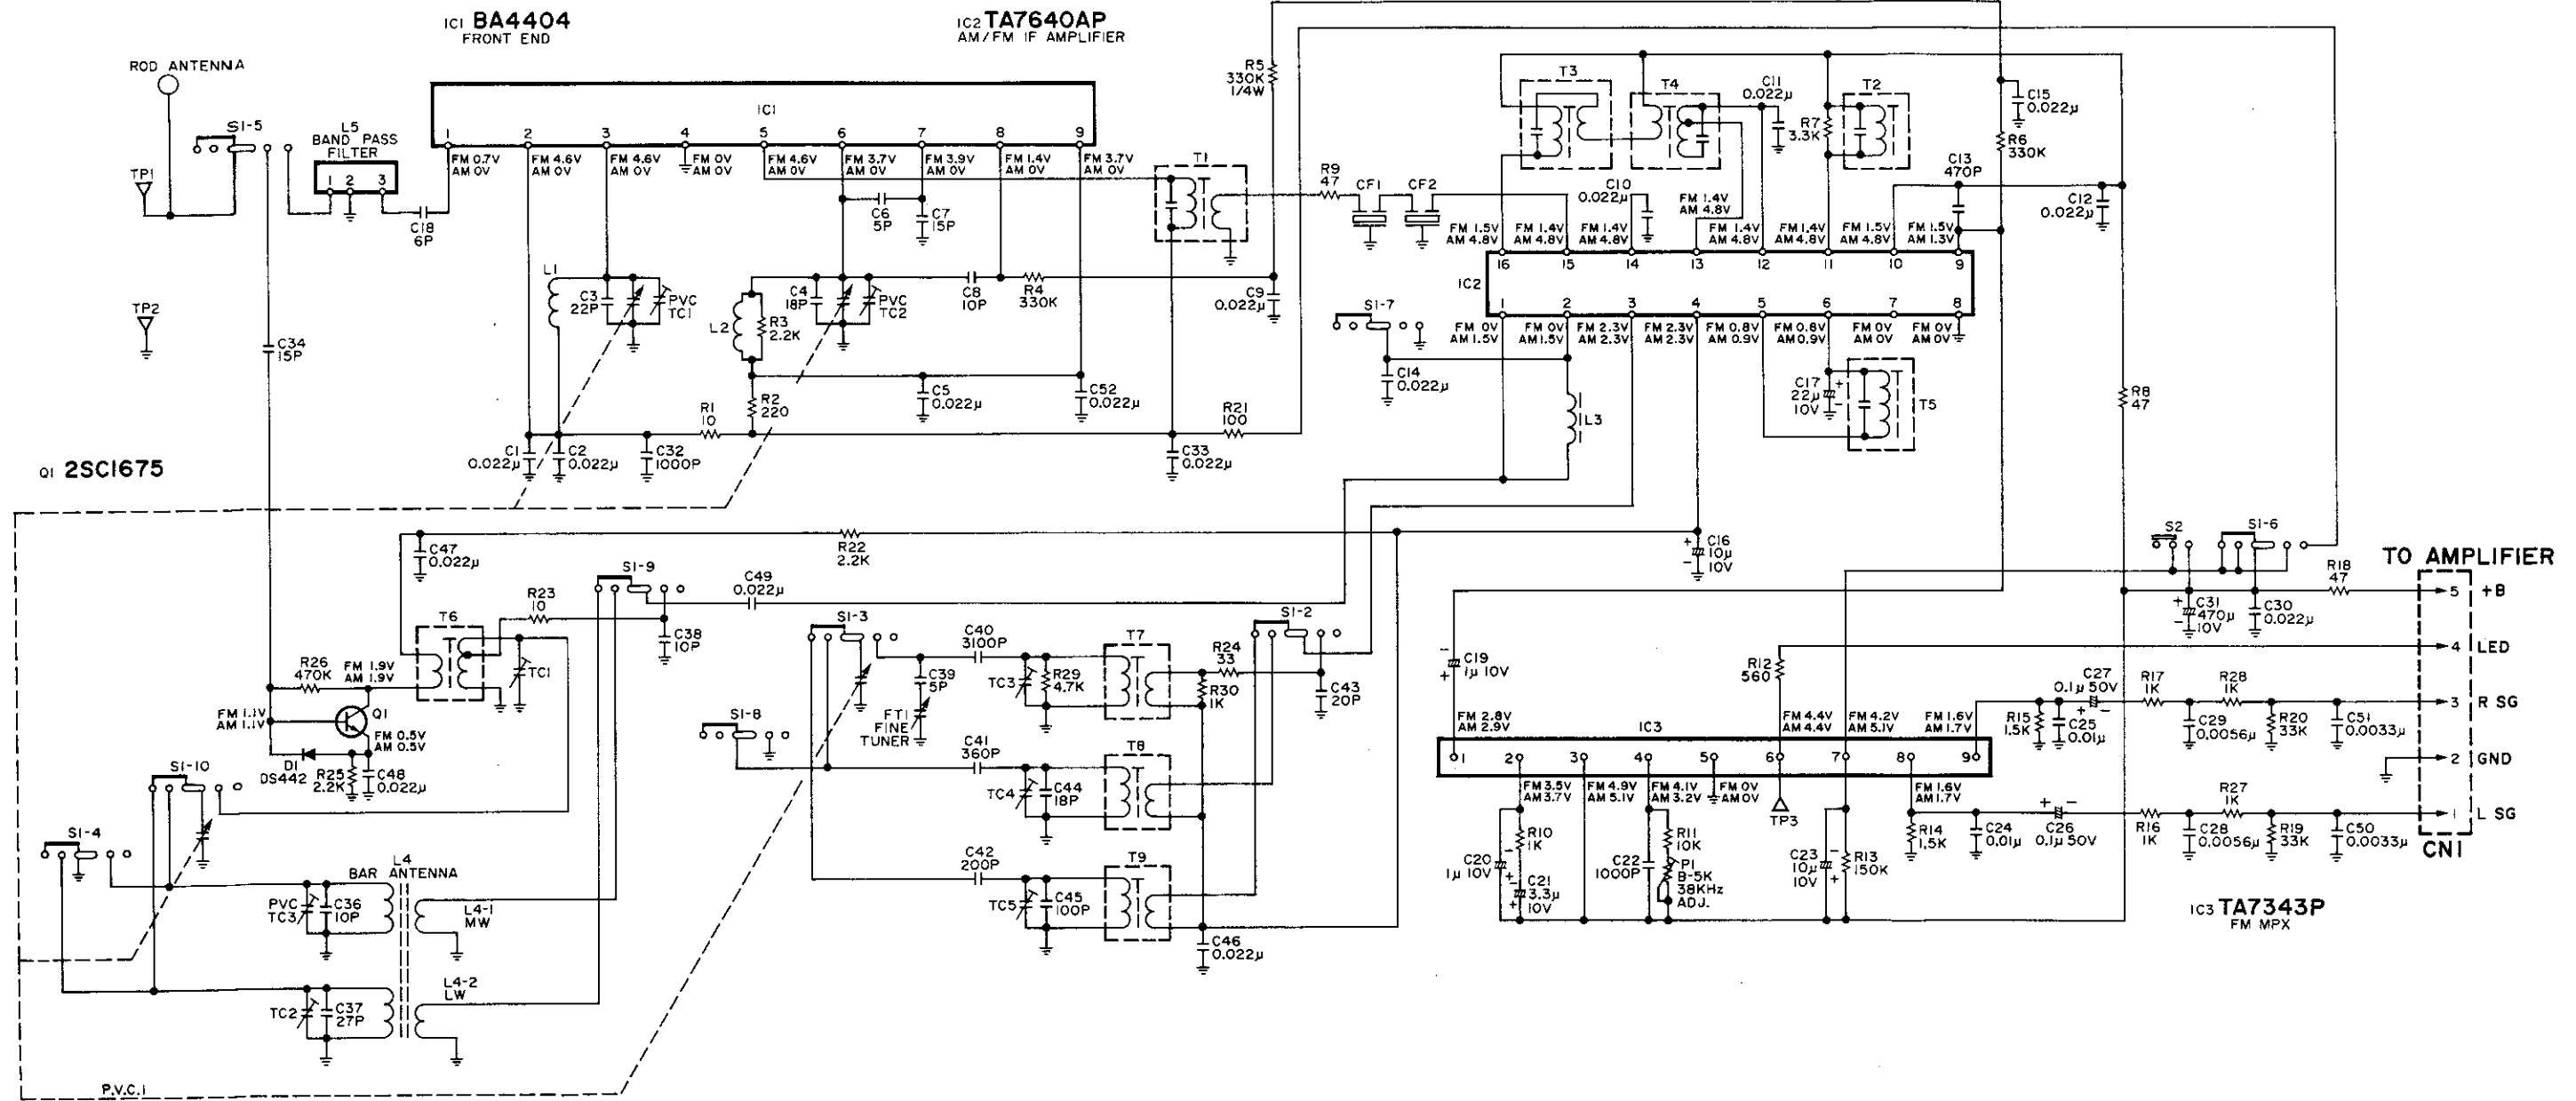


SCHEMATIC DIAGRAM (Tuner)

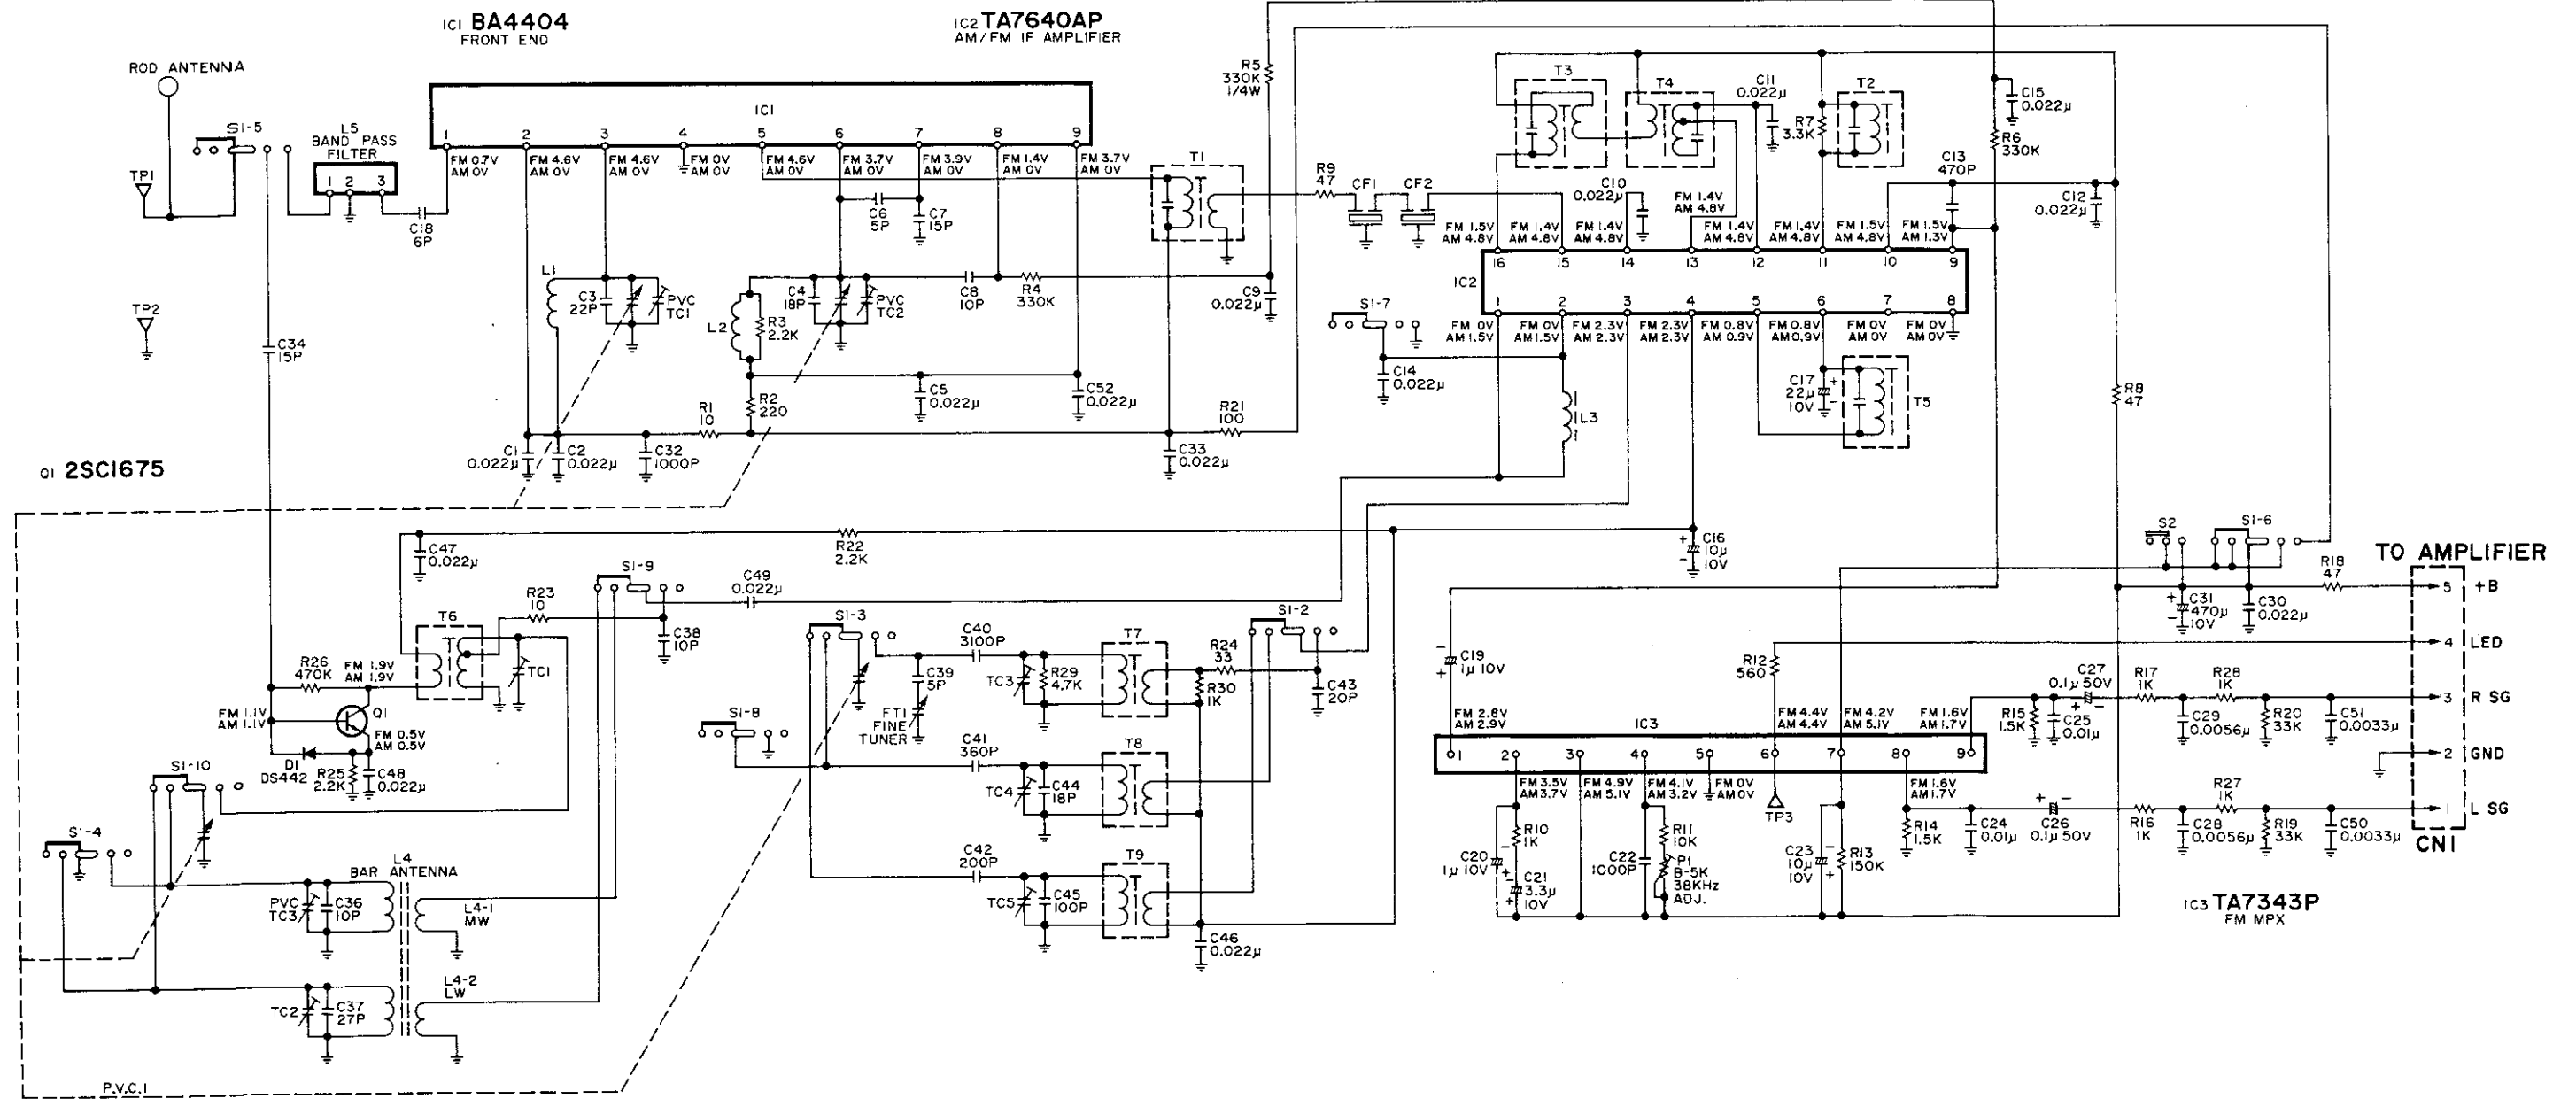

P.C.BOARD & WIRING DIAGRAM (Amplifier)

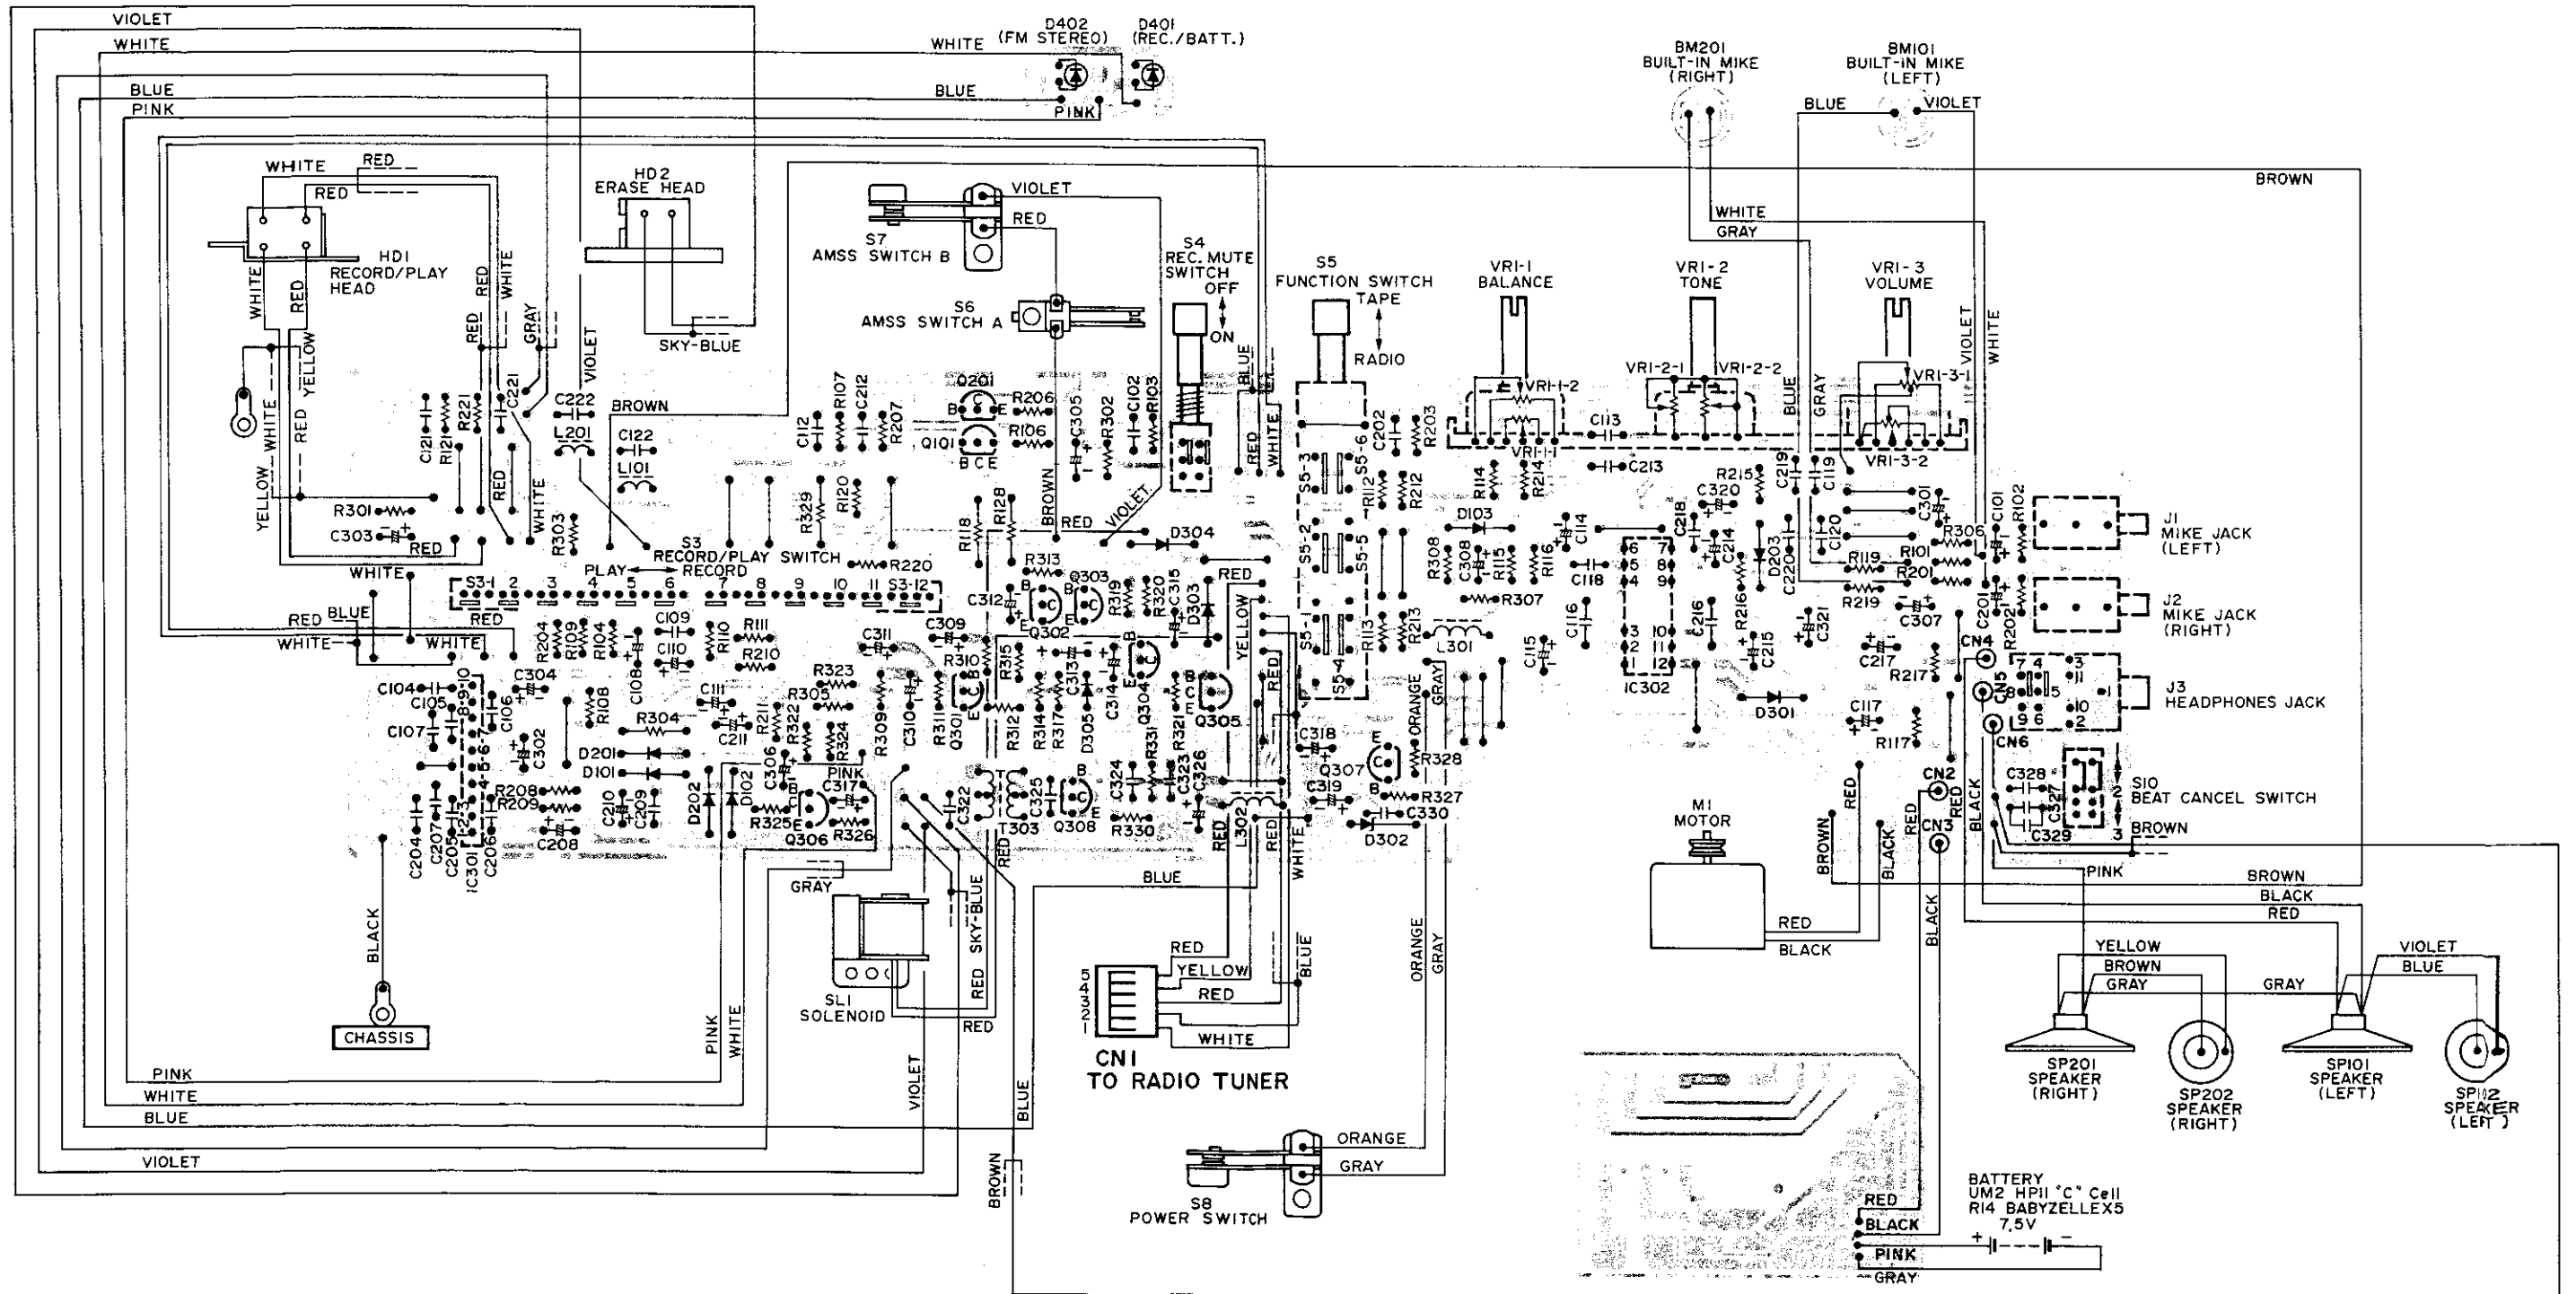

SCHEMATIC DIAGRAM (Amplifier)

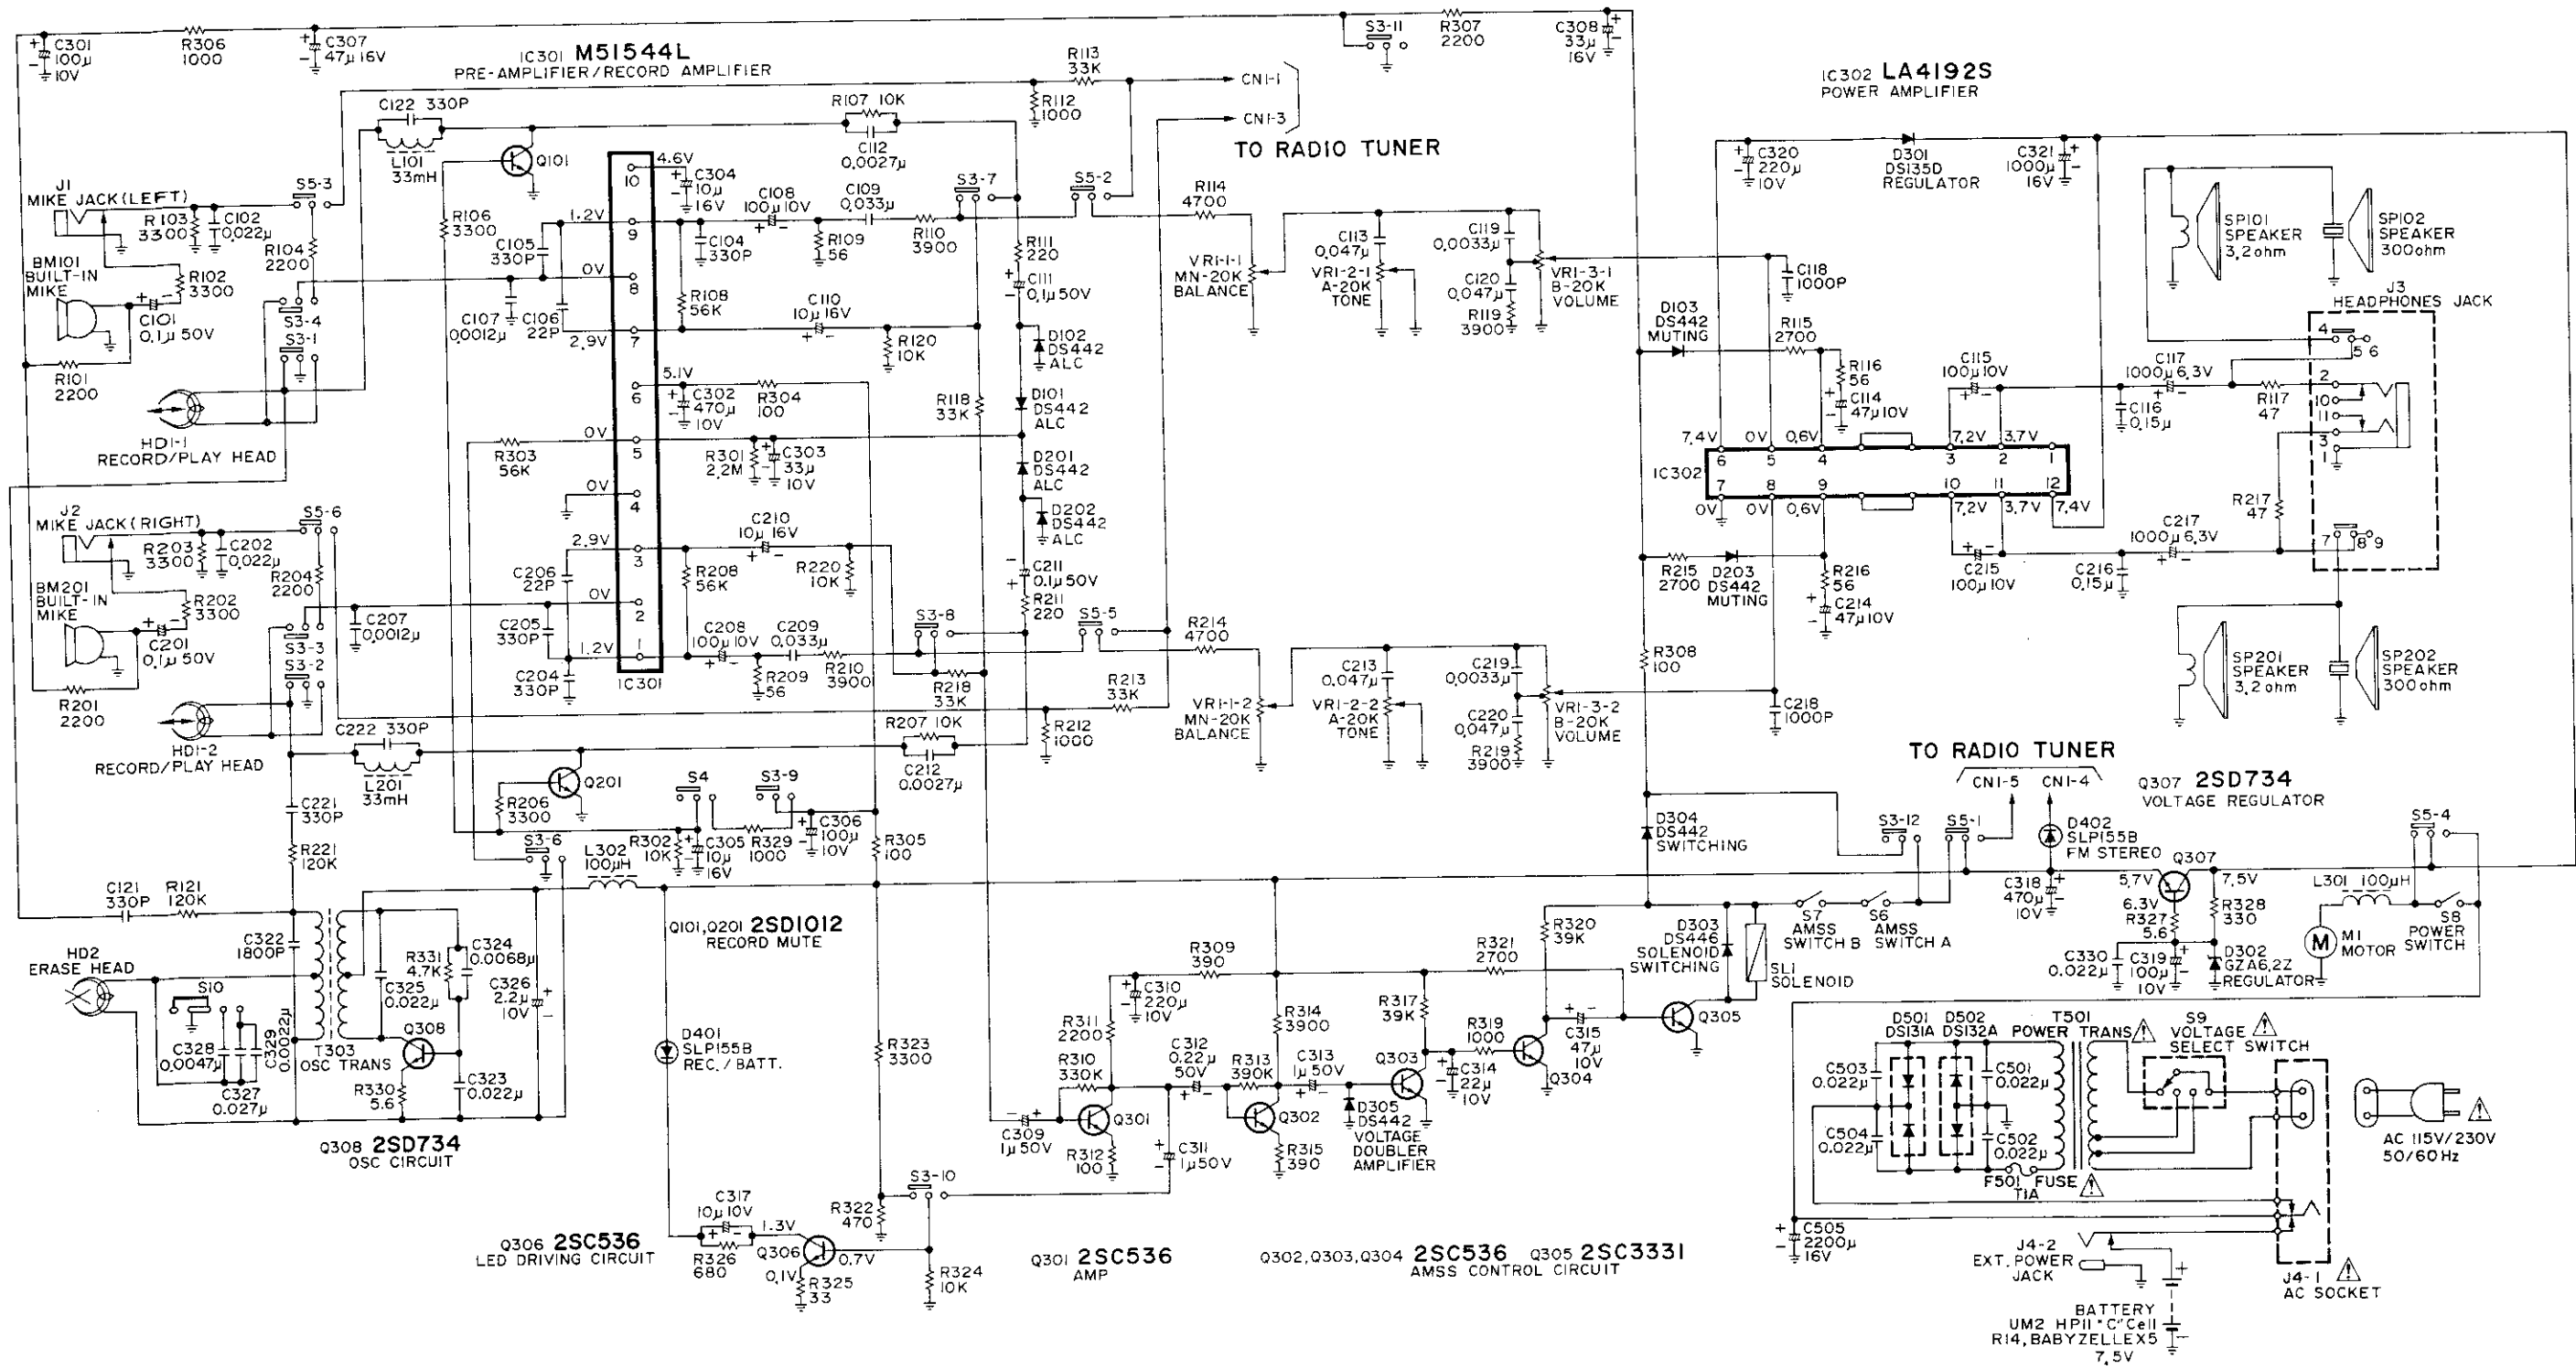

No.	Name	Position	No.	Name	Position
S1	Band Select Switch	LW	S6	AMSS Switch A	OFF
S2	FM Mode Switch	MONO	S7	AMSS Switch B	OFF
S3	Record/Play Switch	PLAY	S8	Power Switch	OFF
S4	Record Mute Switch	OFF	S9	Voltage Select Switch	230V
S5	Function Switch	TAPE	S10	Beat Cancel Switch	1

PRODUCT SAFETY NOTICE


Each precaution in this manual should be followed during servicing. Components identified with the IEC symbol Δ in the parts list and the schematic diagram designate components in which safety can be of special significance. When replacing a component identified with Δ , use only the replacement parts designated, or parts with the same ratings of resistance, wattage or voltage that are designated in the parts list in this manual. Leakage-current or resistance measurements must be made to determine that exposed parts are acceptably insulated from the supply circuit before returning the product to the customer.

SERVICE MANUAL



STEREO RADIO CASSETTE RECORDER

142 382 12 (Silver)
142 382 13 (Red)
142 382 14 (Blue)

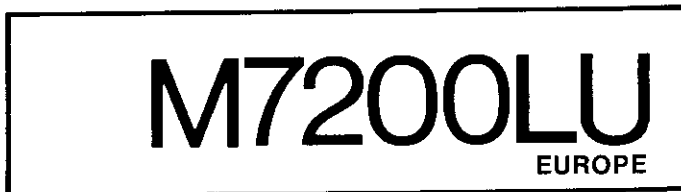

Add this sheet to Model M7200LU (WM-10719) Service Manual.

October/'83/2,200

This model M7200LU has three color versions; **Silver**, **Red** and **Blue** colors and there are some different parts of the exterior due to the kinds of color but the content is identical in all respects. They are classified in the following parts list and the correction should be made in the SERVICE MANUAL and PARTS (PRICE) LIST. For other items, refer to the Service Manual for original model (WM-10719).

PARTS LIST

Ref. No.	Part No.	Description	Q'ty	Ref. No.	Part No.	Description	Q'ty
PACKAGE							
	141 6 1419 69102	Individual Carton (Silver)	1	CA21	141 2 2899 26700	Sheet Lid Cassette	1
	141 6 1419 69105	Individual Carton (Red)	1	CA22	141 2 1649 12900	Knob Band Select	1
	141 6 1419 69106	Individual Carton (Blue)	1	CA23	141 2 4219 09801	Screw	7
	141 6 1449 88800	Styrofoam Case, Right	1	CA24	4 2449 70330	Rod Antenna	1
	141 6 1449 88900	Styrofoam Case, Left	1	CA25	141 2 4729 03001	Lug	1
	141 6 2519 17190	Poly Cover	1	CX1	101 3 1302 60614	Screw, Pan Hd., +M2.6x6	1
	141 6 4559 00100	Serial No. Sheet	3	CX2	102 3 1302 60811	Screw, Pan Hd. Tapping-1, +M2.6x8	1
ACCESSORIES							
	4 2419 72492	Cassette	1	CX3	102 3 1303 01011	Screw, Pan Hd. Tapping-1, +M3.0x10	4
	△ 4 2439 70310	Power Cord	1	CX4	143 3 1303 03013	Screw, Pan Hd. Tapping-B, +M3.0x30	1
	141 6 2519 11022	Poly Cover 110 x 220	1	RADIO CHASSIS			
	141 6 2519 25035	Poly Cover 250 x 350	1	141 2 4729 05300	Wire Band	1	
	141 6 4729 07400	Caution Label	1	DC1	141 2 3119 19703	Chassis Radio (Silver)	1
	141 6 4729 16700	Caution Label	1	DC1	141 2 3119 19704	Chassis Radio (Red)	1
	141 6 4729 37373	FTZ Notice	1	DC1	141 2 3119 19705	Chassis Radio (Blue)	1
	142 6 4119 31855	Instruction Book	1	DC2	4 1539 70661	Microphone [BM101 & BM201]	2
CABINET							
	4 2359 76370	Receptacle	5	DC3	141 2 5389 03400	Drum	1
	4 2359 70990	Socket Pin RT	1	DC4	141 2 8519 78000	Spring Stop	1
CA1	141 0 1119 94502	Cabinet Top Assy (Silver)	1	DC5	141 2 8119 12201	Counter	1
Following Speakers are included in Cabinet Top							
	4 1519 71211	Speaker (30Ω) [SP102 & SP202]	2	DC6	141 2 5649 06000	Belt Counter	1
CA1	141 0 1119 94503	Cabinet Top Assy (Red)	1	DC7	141 2 8139 10600	Bracket Counter	1
		Cabinet Top include Speakers		DC8	141 2 3519 57700	Bracket Arm Eject	1
CA1	141 0 1119 94504	Cabinet Top Assy (Blue)	1	DC9	141 2 8519 29400	SPG Stop Lever	1
		Cabinet Top include Speakers		DC10	141 0 1939 00453	Power Supply P.C.B. Assy [See PCB3]	1
CA2	141 0 1249 25800	Lid Cassette Assy (Silver)	1	DC11	141 2 4219 14200	Screw	1
CA2	141 0 1249 25803	Lid Cassette Assy (Red)	1	DC12	141 2 3829 20800	SPG Battery	1
CA2	141 0 1249 25804	Lid Cassette Assy (Blue)	1	DC13	141 2 3829 06700	Terminal BAT Anode	1
CA3	141 2 8529 06200	Spring Lid Cassette	1	DC14	141 2 3829 18000	SPG Terminal	1
CA4	141 2 4469 44900	Cushion	2	DC15	141 2 5119 09400	Pointer	1
CA5	141 2 1519 24700	Reflector	1	DC16	141 2 1449 56900	Plate Dial	1
CA6	141 2 1559 08200	Ring Speaker	2	DC17	141 2 4219 14000	Screw	3
CA7	141 2 1639 55000	Knob Fine Tuning	1	DC18	141 2 5519 03300	Roller Dial A	3
CA8	141 2 1639 54800	Knob Tuning	1	DC19	141 2 8259 05900	Roller Dial	2
CA9	141 2 4469 31700	Cushion MIC	2	DC20	4 2249 70710	Fine Tuner [FT1]	1
CA10	141 0 5519 08500	Gear Eject Assy	1	DC21	141 2 7519 58400	Shaft Tuning	1
CA11	141 2 1639 54900	Knob Volume	3	DC22	141 0 1939 02110	Switch P.C.B. Assy [See PCB4]	1
CA12	141 2 7419 77200	Lock Lid Cassette	1	DC23	141 2 4469 39300	Cushion Switch	2
CA13	141 0 1719 10900	Handle Assy (Silver)	1	DC24	141 2 2449 41700	Screen Switch	2
CA13	141 0 1719 10902	Handle Assy (Red)	1	DC25	141 2 1629 06900	Knob Band Select	1
CA13	141 0 1719 10903	Handle Assy (Blue)	1	DC26	141 0 1939 02140	Radio Tuner P.C.B. Assy [See PCB2]	1
CA14	141 2 2719 18500	Holder Handle	2	DC27	141 0 1939 00460	LED Indicator P.C.B. Assy [See PCB5]	1
CA15	141 2 1149 31900	Screen Speaker	2	DC28	141 0 1939 00442	Amplifier P.C.B. Assy [See PCB1]	1
CA16	4 1519 71660	Speaker (3.2Ω) [SP101]	1	DC29	141 2 1659 18900	Knob Switch	1
CA16	4 1519 71660	Speaker (3.2Ω) [SP201]	1	DC30	141 2 1629 06800	Knob Function	1
CA17	141 2 3729 00801	Bracket Fix Speaker	4	DY1	628 3 0911 00000	String 0.5 WH	1
CA18	141 2 4469 45601	Cushion	1	DY2	102 3 1302 60611	Screw, Pan Hd. Tapping-1, +M2.6x6	2
CA19	141 2 1339 31000	Lid Battery (Silver)	1	DY3	102 3 1302 60811	Screw, Pan Hd. Tapping-1, +M2.6x8	4
CA19	141 2 1339 31002	Lid Battery (Red)	1	DY4	102 3 1302 61011	Screw, Pan Hd. Tapping-1, +M2.6x10	1
CA19	141 2 1339 31003	Lid Battery (Blue)	1	DY5	102 3 1302 61411	Screw, Pan Hd. Tapping-1, +M2.6x14	3
CA20	141 2 1119 92203	Cabinet Bottom (Silver)	1	DY6	112 3 1303 00040	E Ring, M3.0	1
CA20	141 2 1119 92204	Cabinet Bottom (Red)	1				
CA20	141 2 1119 92205	Cabinet Bottom (Blue)	1				

NOTE:

- Parts order must contain Model Number, Part Number and description.
- Ordering quantity of screws and resistors must be multiple of 10pcs.

SANYO ELECTRIC TRADING CO., LTD.
OSAKA, JAPAN

Printed in Japan

WM-11007